

SECTION 501-10: Seating
DISASSEMBLY AND ASSEMBLY

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Seat Backrest — Rear, Crew Cab

Disassembly and Assembly

NOTE: For parts identification and location, refer to [Seat — Exploded View, Rear, Crew Cab](#) in this section.

1. Remove the seat backrest. For additional information, refer to [Seat Backrest — Rear, Crew Cab](#) in this section.
 2. Remove the seat backrest cover. For additional information, refer to [Seat Backrest Cover — Rear, Crew Cab](#) in this section.
 3. Remove the 2 bolts and backrest latch.
 - To install, tighten to 10 Nm (89 lb-in).
 4. If equipped, remove the heated seat system components.
 - Disconnect and detach the backrest heater mat electrical connector.
 - For 60 percent backrest, remove the heated seat module and bracket.
 - Disconnect the 2 heated seat module electrical connectors.
 - Remove the 2 screws, heated seat module and bracket.
 - To install, tighten to 14 Nm (124 lb-in).
 - Release the pin-type retainers and remove the wire harness.
 - Note the wire harness routing for correct installation.
 5. Remove the hog rings and foam pad from the backrest frame.
 6. To assemble, reverse the disassembly procedure.
-

mcx30.com