

Seat Cushion — Rear, SuperCab

Disassembly and Assembly

NOTE: For parts identification and location, refer to [Seat — Exploded View, Rear, SuperCab](#) in this section.

1. Remove the rear seat cushion cover(s). For additional information, refer to [Seat Cushion Cover — Rear, SuperCab](#) in this section.
 2. Remove the seat cushion latch. For additional information, refer to [Seat Latch — Rear, SuperCab](#) in this section.
 3. Remove the riser rear screw and inboard riser from the rear seat frame.
 - To install, tighten to 6 Nm (53 lb-in).
 4. Remove the 2 screws and 2 backrest latches from the rear seat frame.
 5. To assemble, reverse the disassembly procedure.
-