


SECTION 501-11: Glass, Frames and Mechanisms
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Window Control Switch — Front


NOTE: LH shown, RH similar.

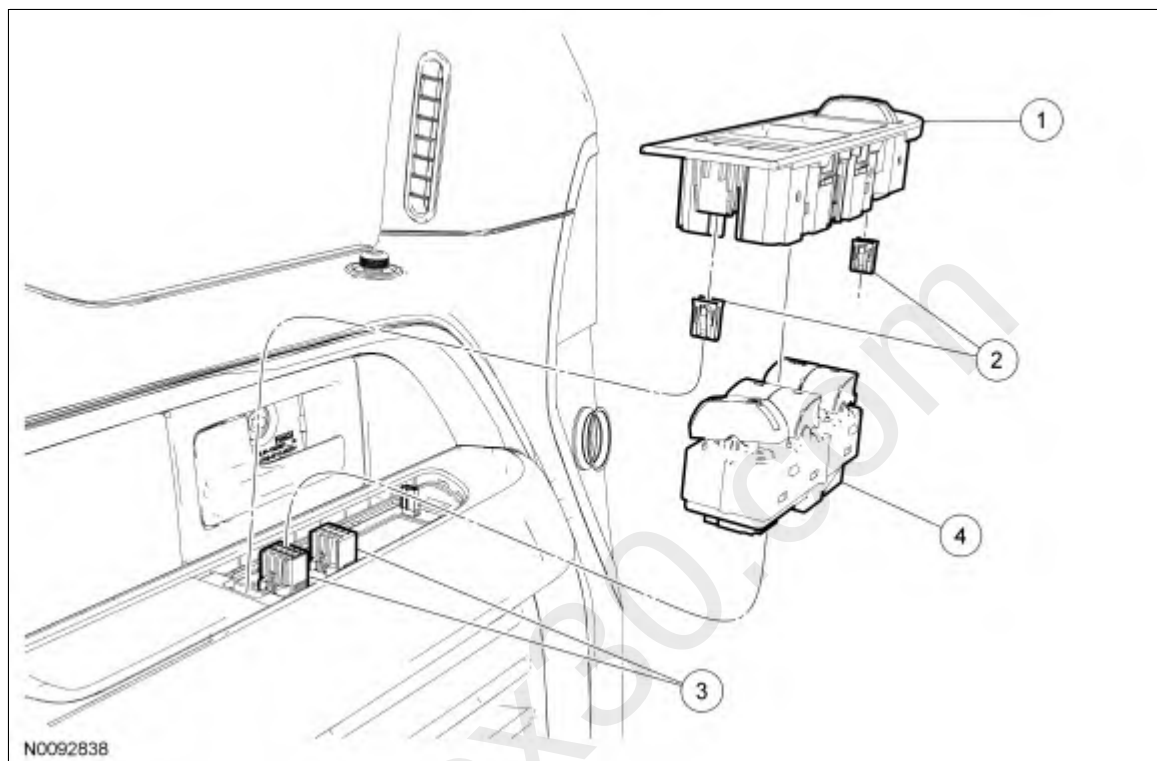

Item	Part Number	Description
1	14528 RH/ 14527 LH	Window control switch bezel (Regular cab)
1	14524 RH/ 14525 LH	Window control switch bezel (SuperCab and SuperCrew)
2	—	Window control switch bezel clips (part of window control switch bezel) (2 required)
3	14A005	Window control switch electrical connectors
4	14529	Window control switch

Removal and Installation

1. Using a suitable trim tool, release the 2 clips on the outer edge of the window control switch bezel and pull the window control switch assembly straight upward.

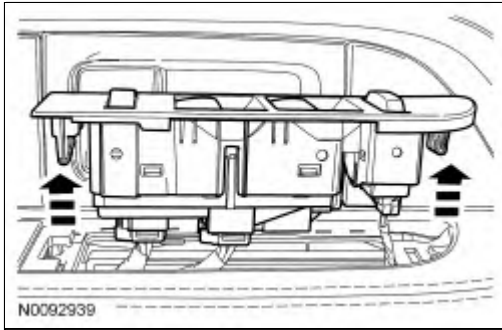

2. Disconnect the window control switch electrical connectors.
 3. Release the tabs and remove the window control switch from the bezel.
 4. To install, reverse the removal procedure.
-