

SECTION 501-11: Glass, Frames and Mechanisms
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013


Window Regulator Motor

Removal and Installation

NOTE: The front window motor must be de-initialized, then initialized whenever the LH front or RH front window motor is removed from the window regulator drum housing, a new window regulator is installed, a new window glass is installed, a new top run is installed or for any operation in which grease or lubricants are applied to the window regulator or glass run.

1. Remove the window regulator and motor assembly. For additional information, refer to [Window Regulator and Motor — Front Door](#), [Window Regulator and Motor — Rear Door, SuperCab](#) or [Window Regulator and Motor — Rear Door, SuperCrew](#) in this section.
2. **NOTE:** Front door window regulator shown, all others similar.

Remove the 3 door window-to-regulator bolts.

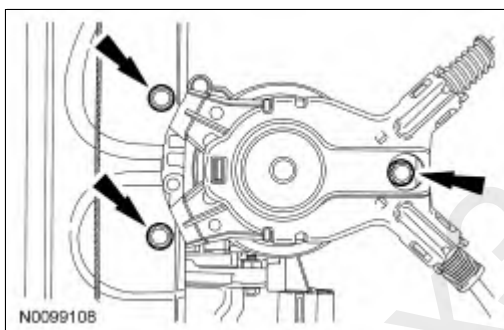

3. To install, reverse the removal procedure.
 - Initialized the front window motor. For additional information, refer to [Window Motor Initialization](#) in this section.
-

mcx30.com