


SECTION 501-12: Instrument Panel and Console
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Console — Floor

Mark LT, Platinum, Limited

NOTE: Floor console with flow thru vents and selector lever shown, floor console without flow thru vents and selector lever similar.

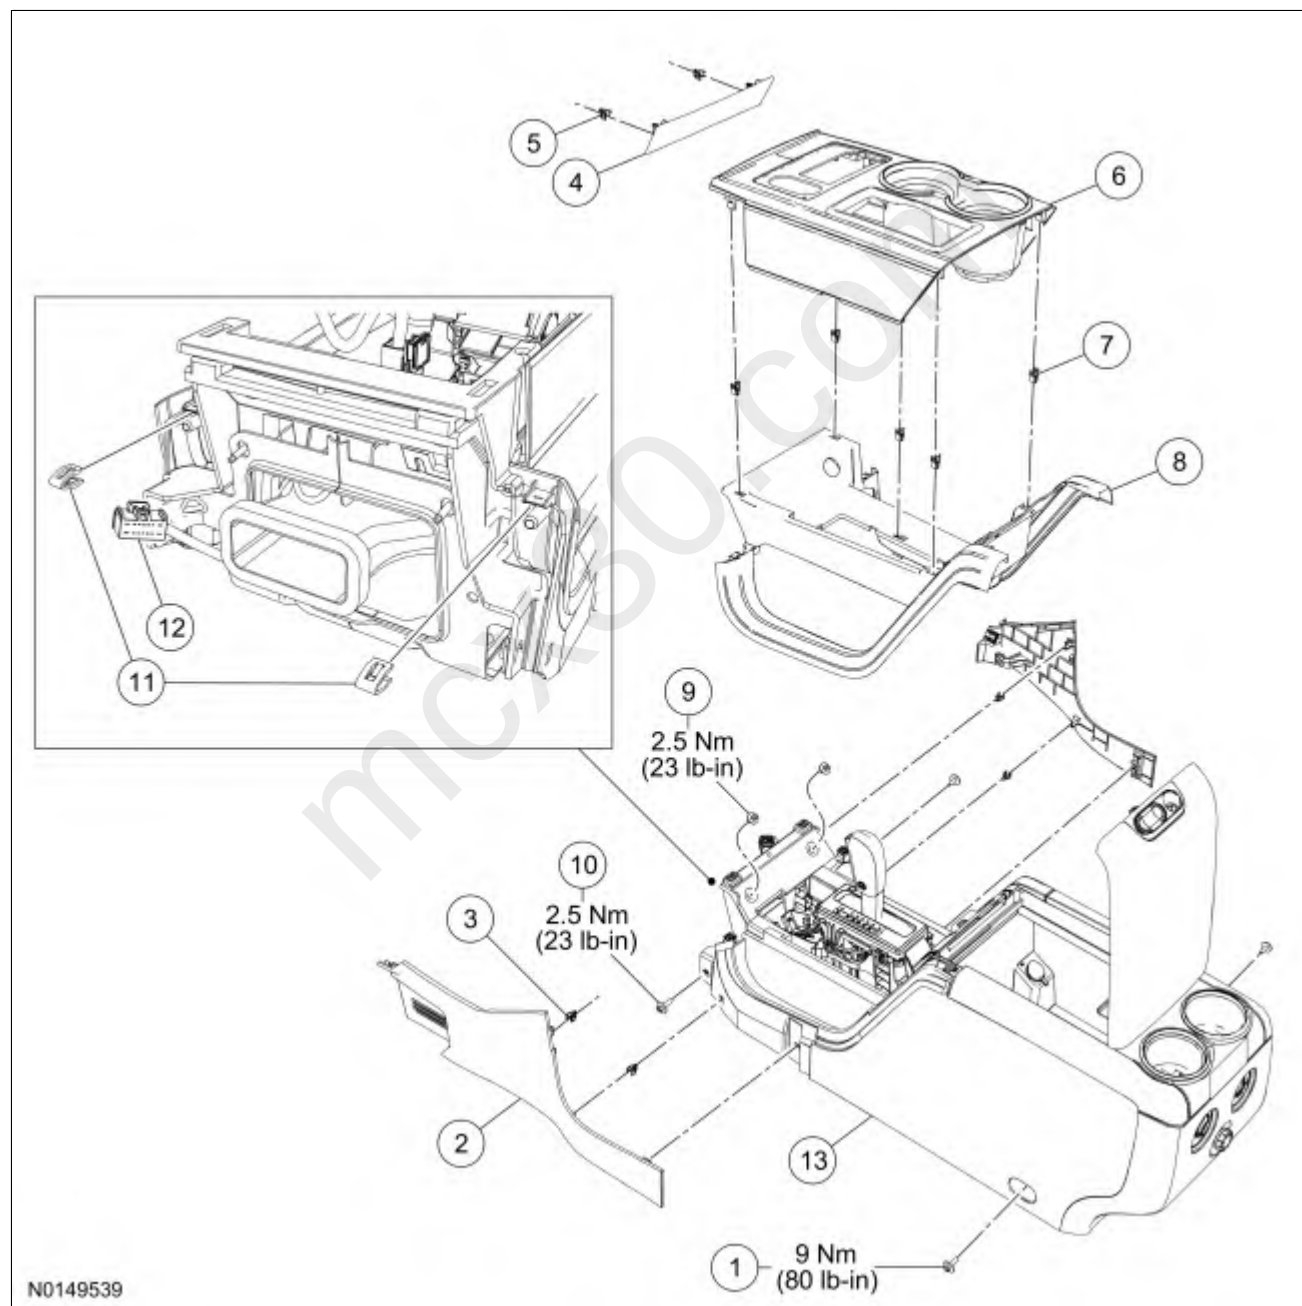


Item	Part Number	Description
1	W714064	Floor console rear bolt (2 required)

2	04608 RH/ 04609 LH	Floor console lower trim panel
3	W712210	Floor console lower trim panel retaining clip (2 required per side)
4	046B32	Instrument panel-to-floor console finish panel
5	—	Instrument panel-to-floor console finish panel retaining clip (part of 04B32) (2 required)
6	045A76	Floor console upper finish panel
7	—	Floor console upper finish panel retaining clip (part of 045A76) (5 required)
8	04567A	Selector lever trim panel
9	W704734	Floor console-to-instrument panel bolt
10	W704734	Floor console front bolt (2 required)
11	—	Floor console retaining clips (part of 045A36) (5 required)
12	—	Floor console electrical connector (part of 045A36)
13	045A36	Floor console

All Other Vehicles

NOTE: Floor console with flow thru vents and selector lever shown, floor console without flow thru vents and selector lever similar.

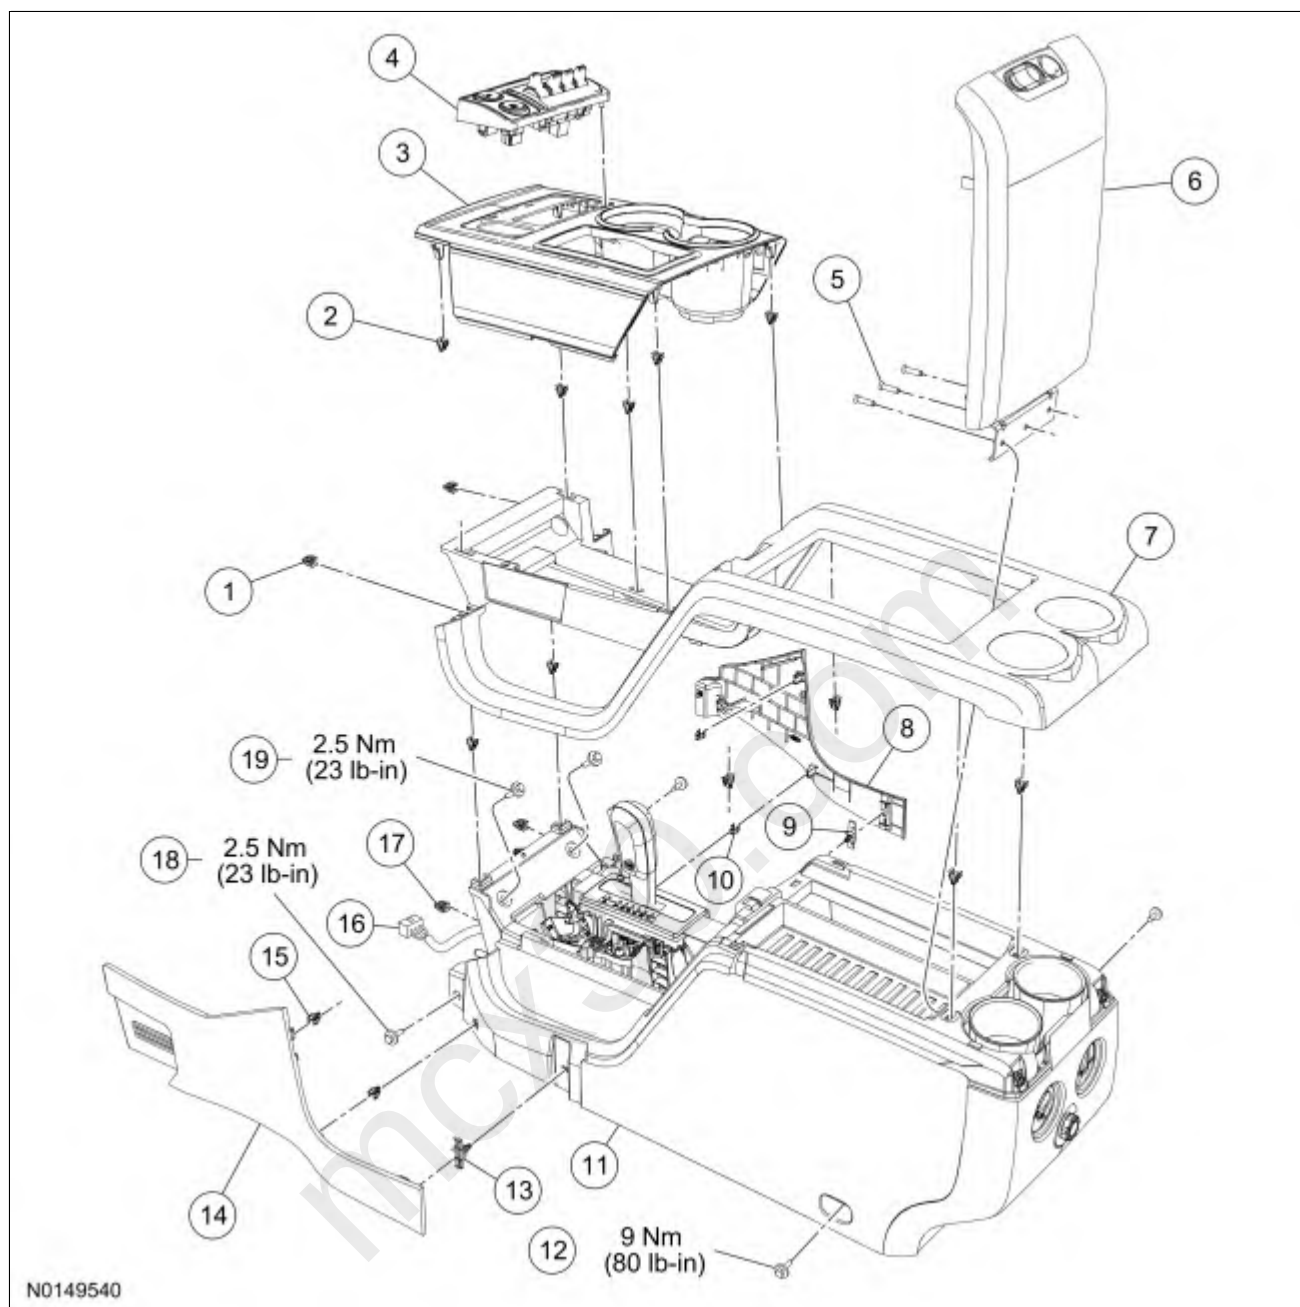

Item	Part Number	Description
1	W705289	Selector lever trim panel retaining clip (8 required)
2	—	Floor console upper finish panel retaining clip (part of 045A76) (5 required)
3	045A76	Floor console upper finish panel
4	13K724	Auxiliary switch assembly (SVT Raptor)
5	W714473	Storage compartment door screw (3 required)
6	—	Storage compartment door (part of 045A36)
7	04567A	Selector lever trim panel
8	04608	RH floor console lower trim panel

9	—	RH floor console lower trim panel pin-type retainer (part of 04608)
10	W712210	RH floor console lower trim panel retaining clip (2 required)
11	045A36	Floor console
12	W714064	Floor console rear bolt (2 required)
13	—	LH floor console lower trim panel pin-type retainer (part of 04609)
14	04609	LH floor console lower trim panel
15	W712210	LH floor console lower trim panel retaining clip (2 required)
16	—	Floor console electrical connector (part of 045A36)
17	—	Floor console retaining clips (part of 045A36) (2 required)
18	W704734	Floor console front bolt (2 required)
19	W704734	Floor console-to-instrument panel bolt (2 required)

Removal and Installation

Vehicles with selector lever in floor console

1. Apply the parking brake.

All vehicles

2. Position the front seats forward.
3. Remove the 2 floor console rear bolts.
 - To install, tighten to 9 Nm (80 lb-in).
4. Position the front seats rearward.

Consoles with flow thru vents

5. Remove the LH and RH floor console lower finish panels, in the following sequence.
 1. Pull the rear section of the panels outward to release the retaining clips.
 2. Pull the panels toward the rear of the vehicle.
 3. If equipped, disconnect the ambient light connector(s).

All vehicles — except Mark LT, Platinum, Limited

6. Remove the 3 screws and storage compartment door.


Vehicles with selector lever in floor console

7. **NOTICE:** When prying on a component, a non-marring tool must be used or damage to the component may occur.

Remove the instrument panel-to-floor console finish panel.


- Using a non-marring tool, gently pry outward at the lower corners of the instrument panel-to-

floor console finish panel to release the retaining clips.

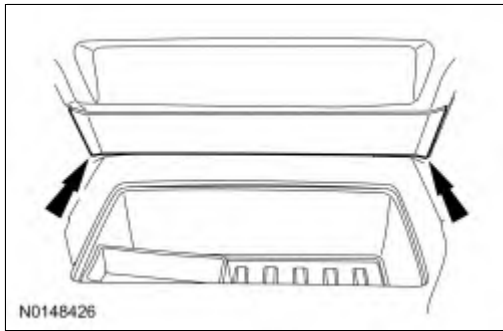

8. Remove the floor console upper finish panel.

- Lift the floor console upper finish panel upward, at the locations indicated, to release the retaining clips.

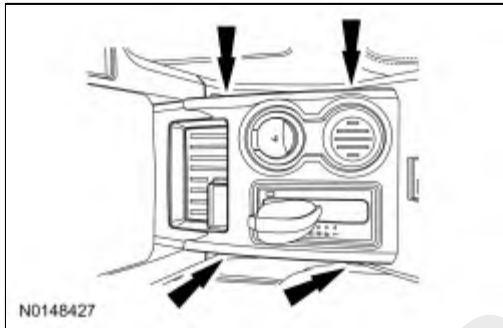

9. Remove the selector lever trim panel.

- Lift the selector lever trim panel upward releasing the retaining clips from the floor console.

10. Remove the 2 floor console-to-instrument panel bolts.


- To install, tighten to 2.5 Nm (23 lb-in).

11. Remove the 2 floor console front bolts.

- To install, tighten to 9 Nm (80 lb-in).


12. Position the floor console rearward.

13. Disconnect the selector lever cable from the selector lever assembly.

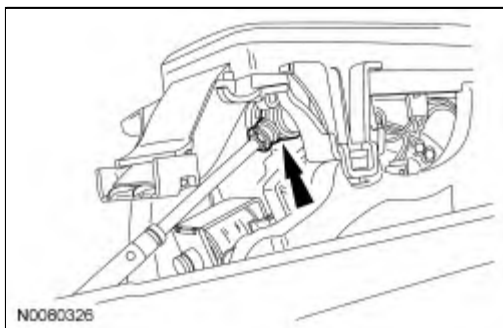

14. Release the selector lever cable retaining tab and remove the selector lever cable from the selector

lever assembly retainer.

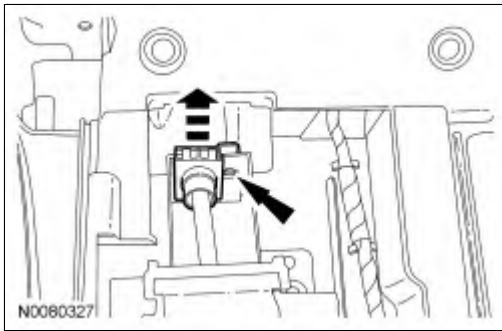

Vehicles without selector lever in floor console

15. Remove the 4 floor console front bolts.
 - To install, tighten to 9 Nm (80 lb-in).

All vehicles

16. Disconnect the floor console electrical connector(s).
 17. Remove the floor console.
 18. To install, reverse the removal procedure.
 - Make sure to align the trim panel retaining clips to the adjacent retaining clip holes.
-