

SECTION 501-14: Handles, Locks, Latches and Entry Systems
GENERAL PROCEDURES

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013


Door Handle to Latch Rod Adjustment

NOTE: If the vehicle is equipped with an adjustable door latch actuating rod, perform this procedure.

NOTE: An incorrectly adjusted exterior door handle can cause a loose handle, rattle noise, door hard to open from the outside door handle, or the outside door handle to not sit flush in the closed position.

NOTE: Prior to carrying out the adjustment procedure, the door latch, exterior door handle, and linkages must be installed on the door.

1. Raise the door glass to the full-up position.
2. Remove the door trim panel. For additional information, refer to [Section 501-05](#).
3. Position the water shield aside.
4. Open the clip and disconnect the exterior door handle actuating rod.

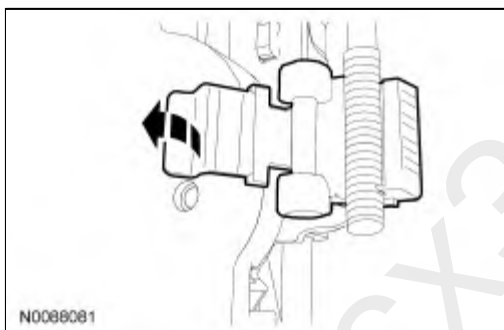

5. Position the actuating rod and latch actuating lever in a neutral position.
6. **NOTE:** Do not push up or pull down on the actuating rod or latch actuating lever.

Reinstall the exterior door handle actuating rod back into the clip.

7. Close the clip and test the system to make sure that the exterior door handle is operating correctly.
 8. Reseal the water shield.
 9. Install the door trim panel. For additional information, refer to [Section 501-05](#).
-

mcx30.com