

SECTION 501-14: Handles, Locks, Latches and Entry Systems
GENERAL PROCEDURES


2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Latch Lubrication


Material

Item	Specification
Motorcraft® Multi-Purpose Grease XL-5	ESB-M1C93-B

1. Open the door.
2. Using a screwdriver, fully close the latch (2 clicks).

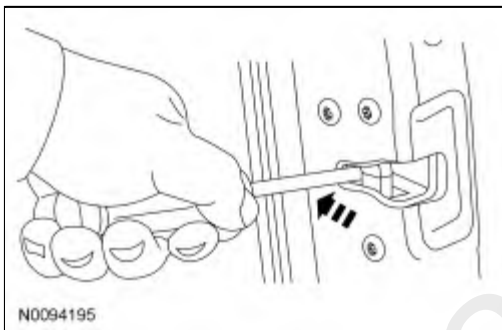

3. Spray the multi-purpose grease into the opening on the door latch for approximately 5 seconds.

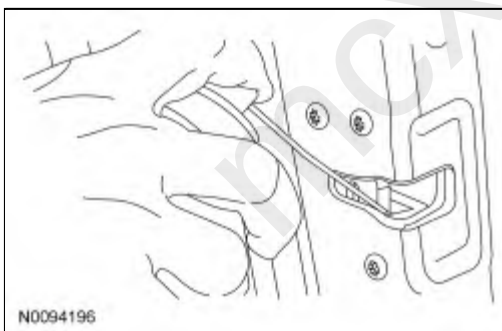

4. Open the latch using either the interior or exterior door handle.
5. Open and close the door several times to circulate the lubricant inside the latch.
6. Wipe off any excess grease.

mcx30.com