

SECTION 501-14: Handles, Locks, Latches and Entry Systems
GENERAL PROCEDURES

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Remote Memory Activation

1. Move the driver seat, power mirrors, and adjustable pedals to the desired positions using the associated controls.
 2. Press and hold control button 1 for five seconds. A tone will be heard after two seconds confirming memory position has been set. Continue to hold until a second tone is heard after five seconds.
 3. Within three seconds press the lock button.
 4. Wait 10 seconds, then press the unlock button.
 5. Repeat this procedure for memory 2 and another transmitter if desired.
-