

SECTION 501-14: Handles, Locks, Latches and Entry Systems
GENERAL PROCEDURES

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Remote Memory Deactivation

1. Press the set button on the memory set switch.
 2. Within 5 seconds, press any button on the Remote Keyless Entry (RKE) transmitter that you wish to deactivate and then press the set button on the memory set switch.
 3. If a second memory setting is desired to be deactivated, repeat the procedure with the second RKE transmitter.
-

mcx30.com