


SECTION 501-14: Handles, Locks, Latches and Entry Systems
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013


Door Ajar Switch — Rear, SuperCab

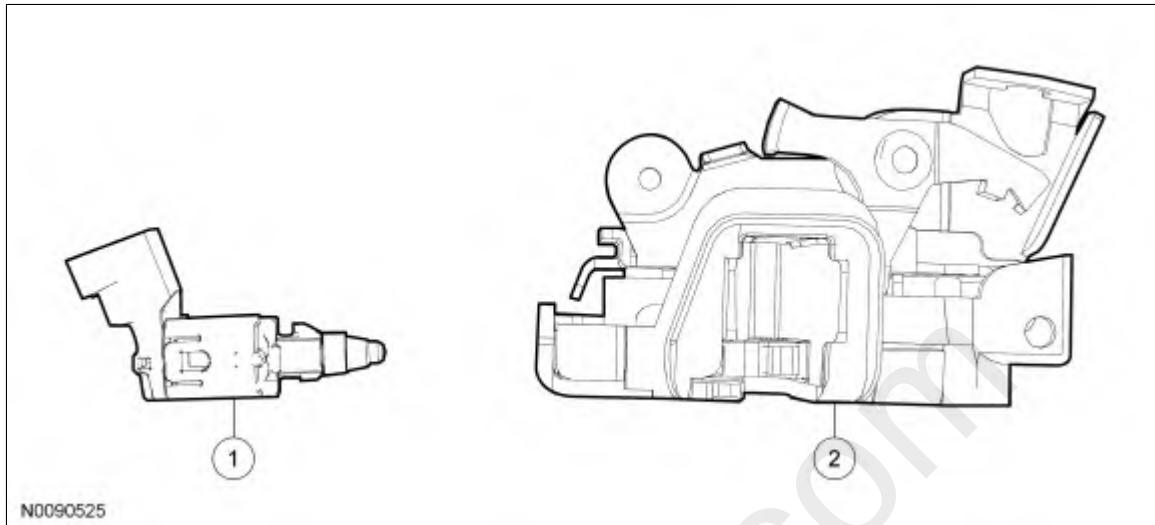

Item	Part Number	Description
1	18265B29	Door ajar switch
2	18264A01/ 18264A00	Lower door latch (LH/RH)

Removal and Installation

1. Remove the lower rear door latch. For additional information, refer to [Rear Door Latch — Lower, SuperCab](#) in this section.
2. Insert a screwdriver or suitable tool into the opening on the door latch and push up on the tab.

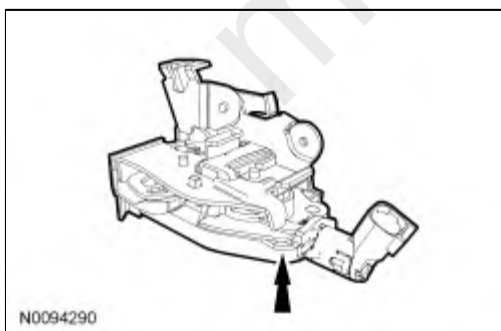

3. Rotate the door ajar switch and remove from the door latch.
4. To install, reverse the removal procedure.

mcx30.com