


SECTION 501-14: Handles, Locks, Latches and Entry Systems
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Interior Door Handle — Front


NOTE: LH side shown, RH similar.

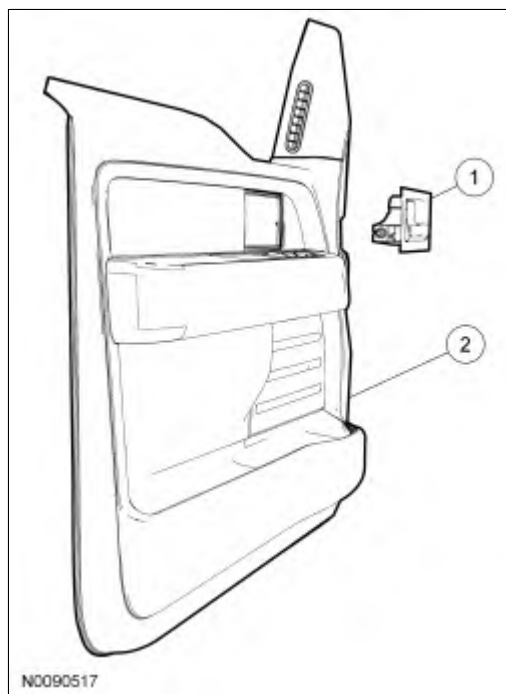


Item	Part Number	Description
1	1522601/ 1522600	Interior door handle (LH/RH)
2	1823943/ 1823942	Door trim panel (LH/RH)

Removal and Installation


1. If equipped, remove the window regulator handle.
 1. Separate the handle cover from the handle.
 2. Remove the screw.
 3. Remove the window regulator handle.
 4. Remove the spacer.

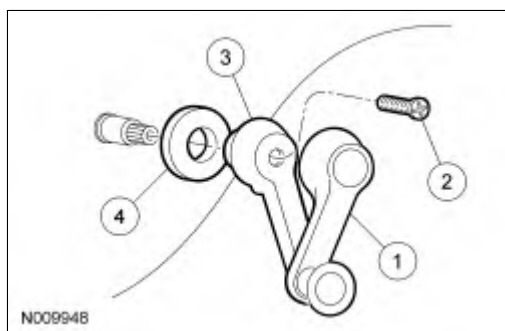


2. Remove the 2 front door trim panel lower screws.

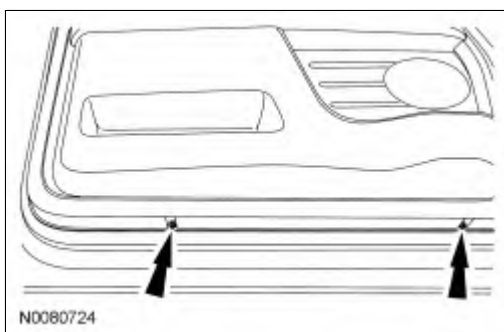

3. Remove the door handle screw cover and screw.

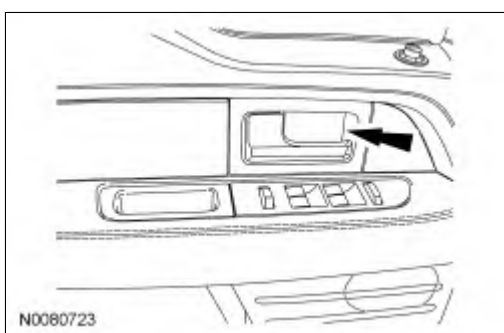

4. Remove the pull cup screw cover and screw.

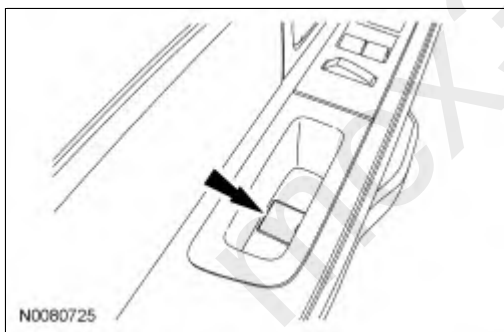


5. **NOTICE:** Do not pull directly outward on the front door trim panel, as damage may occur.

Position the front door trim panel outward.

- Lift upward to remove the front door trim panel and position outward.
- Disconnect the interior handle activating cable from the interior door handle.

6. Release the interior door handle retaining tabs and remove the interior door handle.

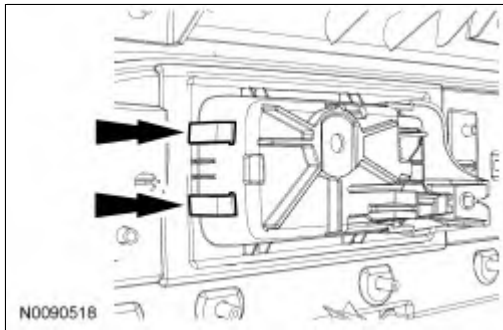

7. To install, reverse the removal procedure.
-

mcx30.com