


SECTION 501-14: Handles, Locks, Latches and Entry Systems
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Interior Door Handle — SuperCab

NOTE: LH side shown, RH similar.

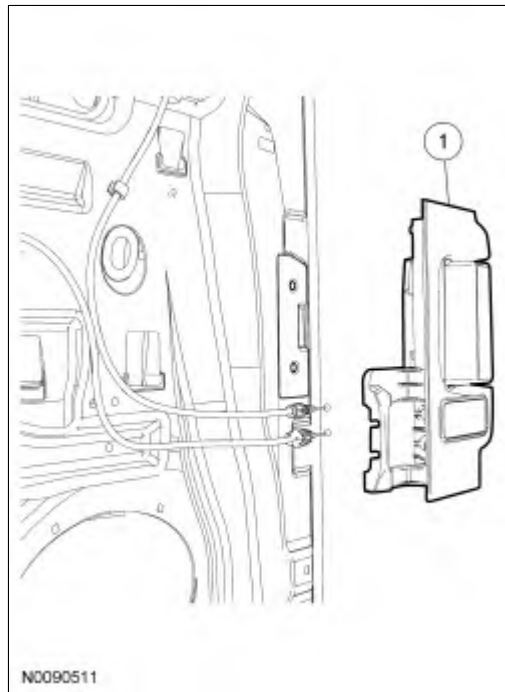

Item	Part Number	Description
1	1822601/ 1822600	Interior door handle (LH/RH)

Removal and Installation

1. Remove the rear door trim panel. For additional information, refer to [Section 501-05](#).
2. Disconnect the upper door latch release cable from the interior door handle.
3. Disconnect the lower door latch release cable from the interior door handle, and remove the interior door handle.
4. To install, reverse the removal procedure.

mcx30.com