


SECTION 501-14: Handles, Locks, Latches and Entry Systems
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Interior Door Handle — SuperCrew


NOTE: LH side shown, RH similar.

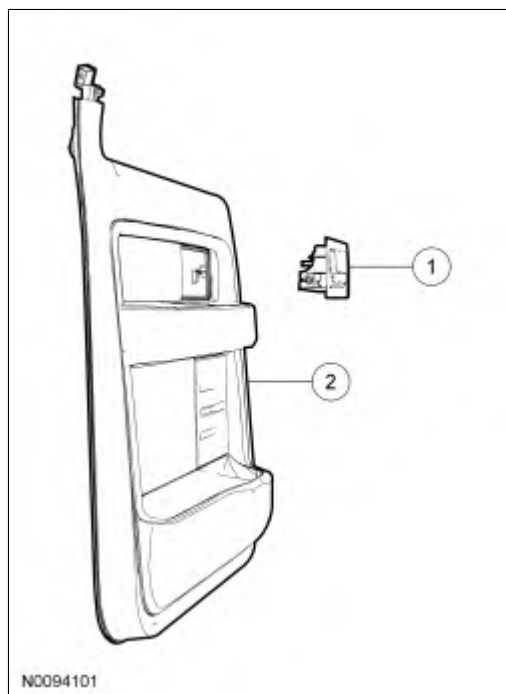


Item	Part Number	Description
1	1822601/ 1822600	Interior door handle (LH/RH)
2	1627407/ 1627406	Door trim panel (LH/RH)

Removal and Installation

1. If equipped, remove the window regulator handle.
 1. Separate the handle cover from the handle.
 2. Remove the screw.
 3. Remove the window regulator handle.
 4. Remove the spacer.

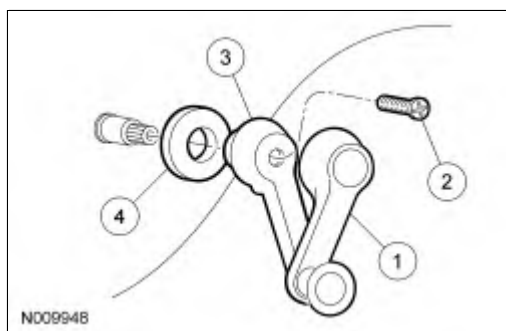

2. Remove the rear door garnish moulding.
 1. Pull outward to release the rear door garnish moulding clips from the door.
 2. Remove the upper rear door trim panel screw.

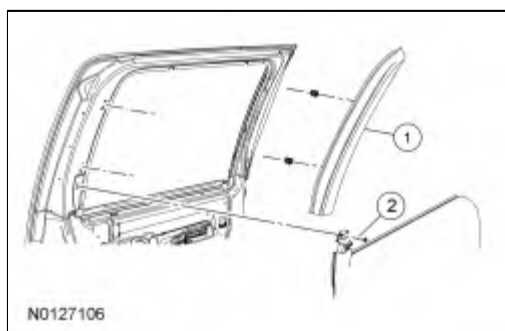


3. Remove the rear door handle cover plate.
4. Remove the rear door handle screw.
5. Remove the 2 rear door trim panel screws.
6. **NOTICE: Do not pull directly outward on the rear door trim panel. Damage may occur.**

Position the rear door trim panel outward.

- Lift upward to remove the rear door trim panel and position outward.
- Disconnect the interior handle activating cable from the interior door handle.

7. Release the interior door handle retaining tabs and remove the interior door handle.

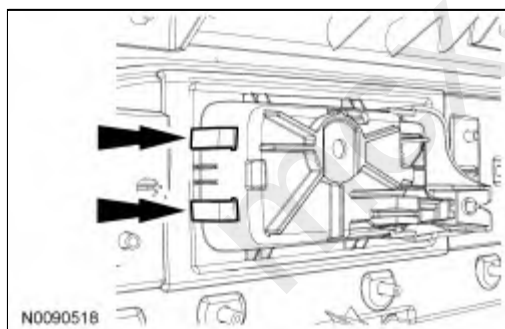

8. To install, reverse the removal procedure.

mcx30.com