

SECTION 501-16: Wipers and Washers
REMOVAL AND INSTALLATION


2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Wiper Pivot Arm

Removal and Installation

1. Remove the wiper pivot arm.
 1. Position the wiper pivot arm upward.
 2. **NOTE:** During installation, it is necessary to pull the locking tab out to its full open (unlatched) position and hold while assembling the pivot arm onto the mounting arm and pivot shaft.

Pull outward on the retaining tab and remove the wiper pivot arm.

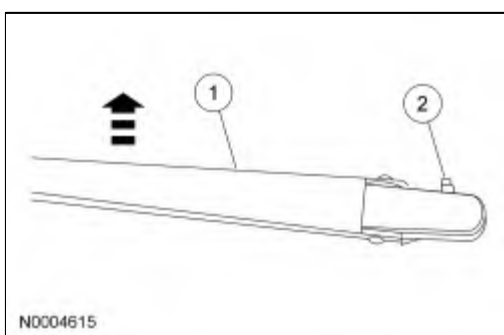

2. To install, reverse the removal procedure.
 - If necessary, align the wiper blade and pivot arm. For additional information, refer to [Wiper Blade and Pivot Arm Adjustment](#) in this section.
-