


SECTION 501-20B: Supplemental Restraint System
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Clockspring

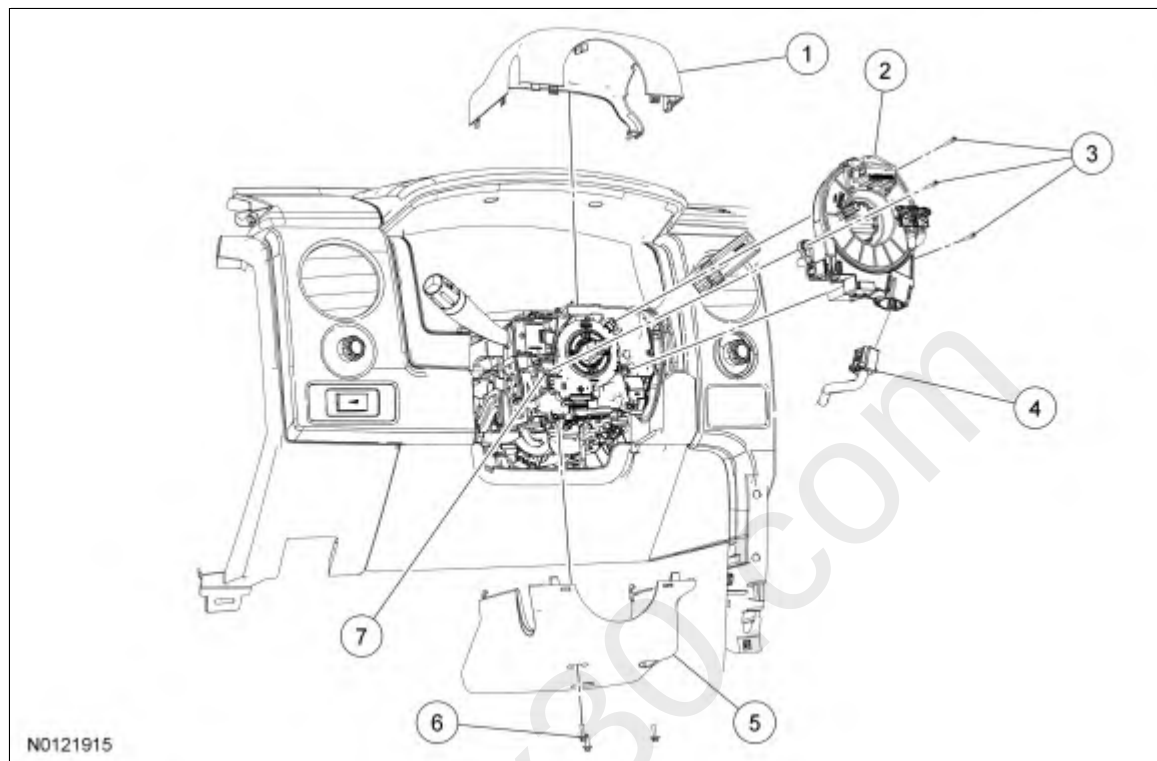

Item	Part Number	Description
1	3530	Upper steering column shroud
2	14A644	Clockspring
3	W506943	Clockspring screws (3 required)
4	—	Clockspring electrical connector (part of 14401)
5	3530	Lower steering column shroud
6	—	Lower steering column shroud screw (3 required)
7	3F791	Steering Column Control Module (SCCM)

Removal

NOTE: The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.

NOTE: The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Remove the driver air bag module. For additional information, refer to [Driver Airbag](#) in the Removal and Installation portion of this section.
2. Remove the steering wheel. For additional information, refer to [Section 211-04](#).