


SECTION 501-20B: Supplemental Restraint System
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013


Occupant Classification System Module (OCSM)

Manual Seat

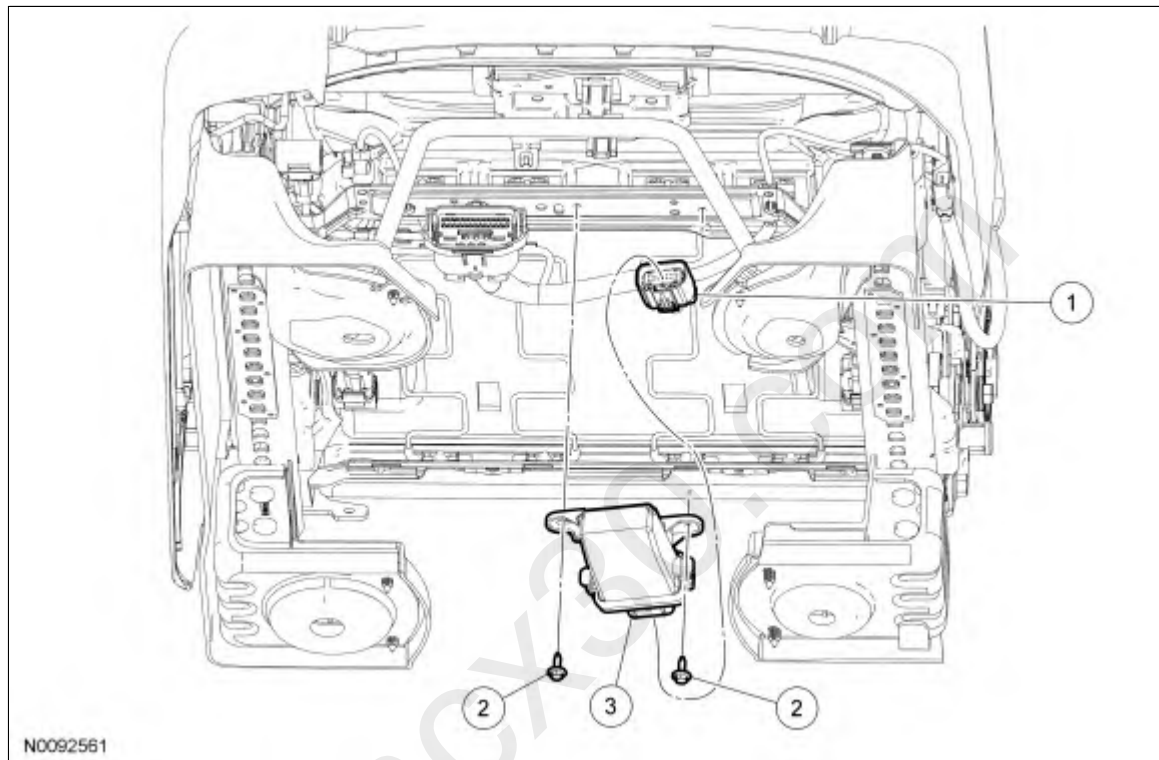

Item	Part Number	Description
1	—	Occupant Classification System Module (OCSM) electrical connector (part of 14A699)
2	W505153	<u>OCSM</u> screws
3	14B056	<u>OCSM</u>

Power Seat

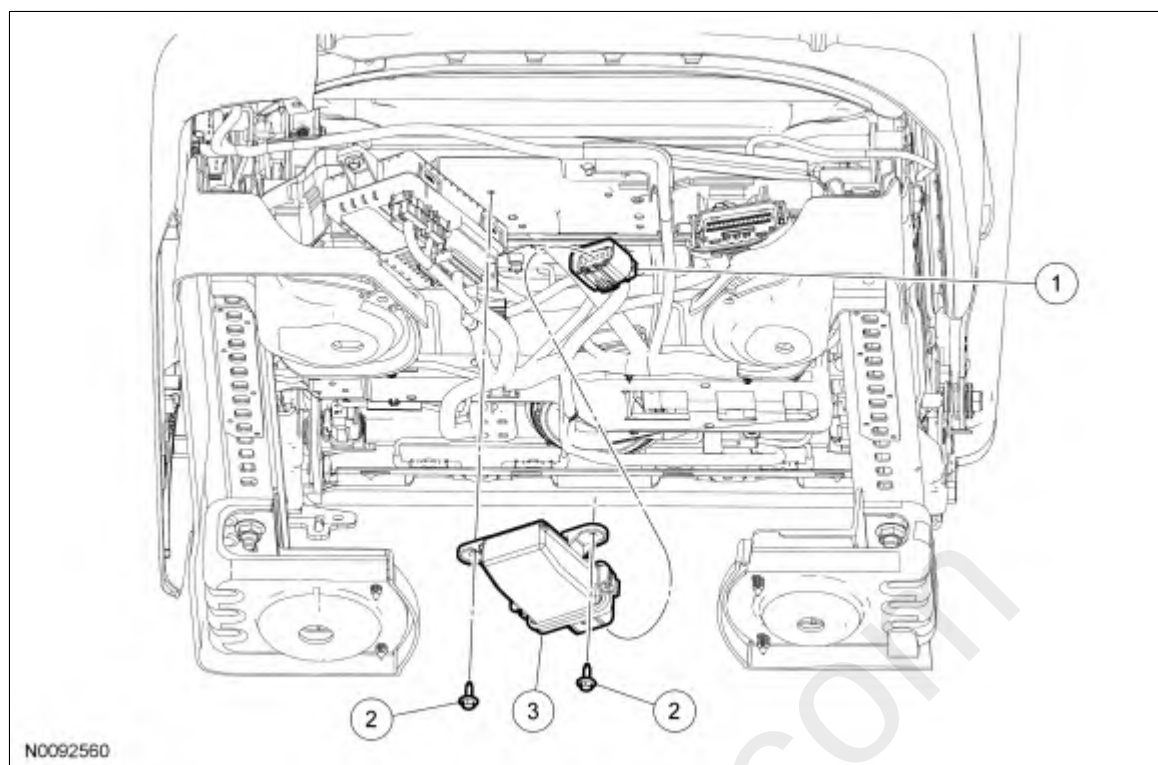

Item	Part Number	Description
1	—	<u>OCSM</u> electrical connector (part of 14A699)
2	W505153	<u>OCSM</u> screws
3	14B056	<u>OCSM</u>

Removal and Installation

1. **NOTE:** Ignition must be OFF when disconnecting the Occupant Classification System Module (OCSM) electrical connector. Otherwise, a DTC will set in the Restraints Control Module (RCM) memory and must be cleared before releasing the vehicle.

Turn the ignition OFF and wait at least one minute.

2. Disconnect the OCSM electrical connector.
3. Remove the 2 screws and OCSM.
4. To install, reverse the removal procedure.
5. If a new OCSM has been installed, carry out the Occupant Classification System (OCS) System Reset procedure. For additional information, refer to [Occupant Classification Sensor \(OCS\) System Reset](#) in the General Procedures portion of this section.

mcx30.com