


SECTION 501-20B: Supplemental Restraint System
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Seat Position Sensor

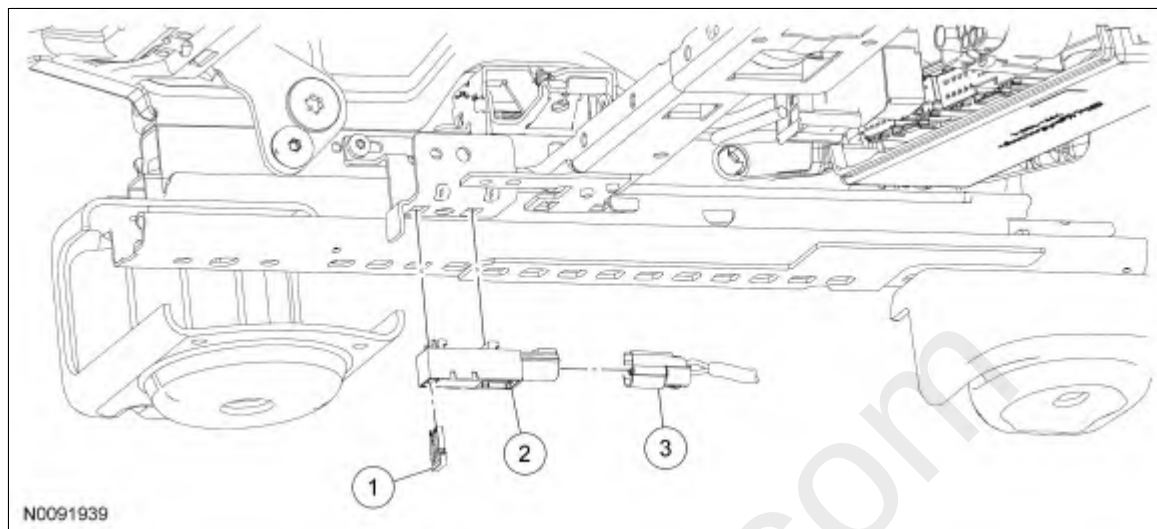

Item	Part Number	Description
1	—	Lock tab
2	14B416	Seat position sensor
3	—	Electrical connector (part of 14A699)

1. Remove the driver seat. For additional information, refer to Seat Removal and Installation in [Section 501-10](#).
2. Disconnect the seat position sensor electrical connector.
3. Remove the lock tab.
4. Remove the seat position sensor.
5. To install, reverse the removal procedure.

mcx30.com