


SECTION 206-05: Parking Brake and Actuation
GENERAL PROCEDURES

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Parking Brake Cable Tension Release

1. Release the parking brake.
2. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
3. With an assistant, release the parking brake cable tension by pulling down on the intermediate cable at the cable-to-cable union until the parking brake control sector rotates to its stop and a 4 mm (0.15 in) x 150 mm (5.9 in) retainer pin can be inserted.

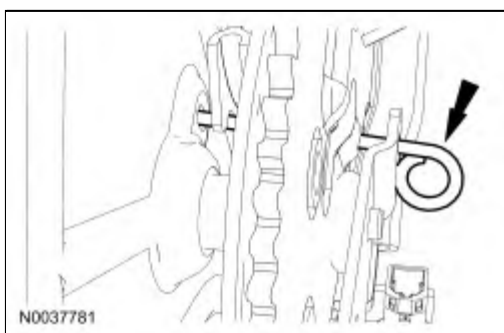

4. Disconnect the cable at the cable-to-cable union.
5. To reload the tension on the parking brake cable, follow the release procedure in reverse.
 - Inspect the parking brake system for correct operation.

