


SECTION 206-07: Power Brake Actuation
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Brake Booster Vacuum Sensor

NOTE: Rear Wheel Drive (RWD) shown, Four-Wheel Drive (4WD) similar.

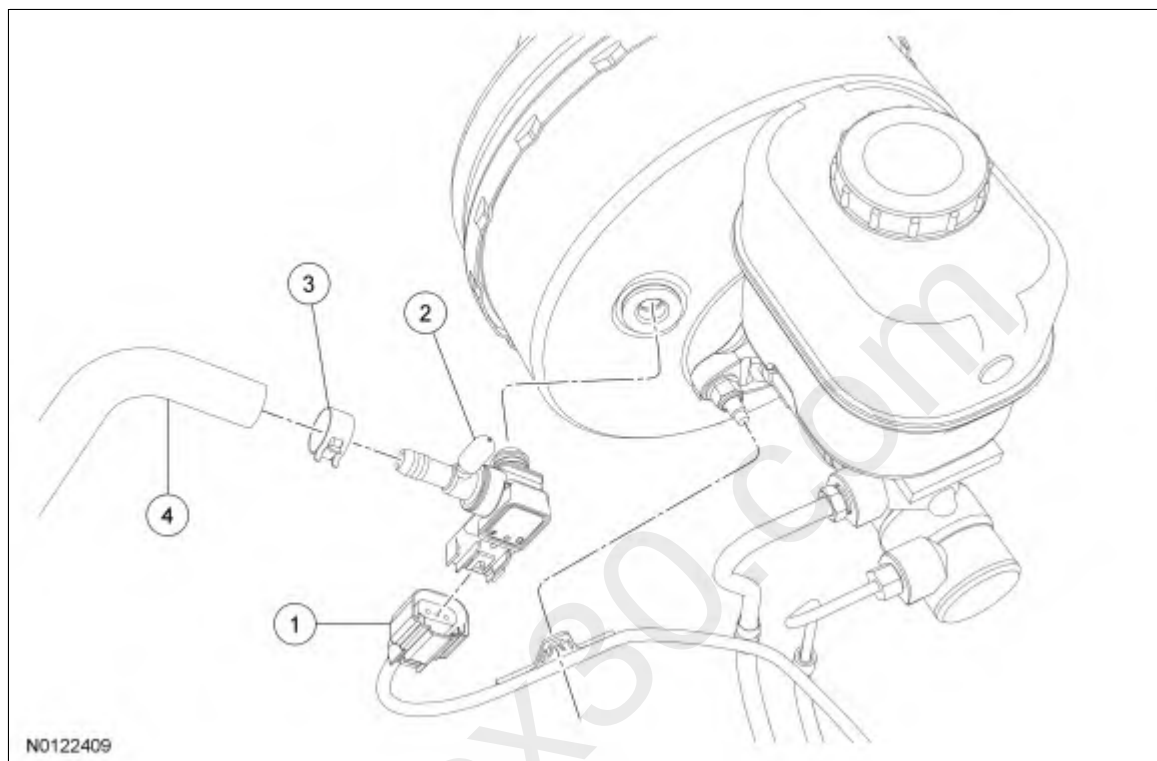

Item	Part Number	Description
1	—	Vacuum sensor electrical connector (part of 12A581)
2	2365	Brake booster vacuum sensor
3	—	Hose clamp (part of 9C490)
4	—	Vacuum supply hose (part of 9C490)

1. Relieve the vacuum in the brake booster by pressing and releasing the brake pedal a minimum of 5 times with the engine not running.
2. Disconnect the vacuum supply hose from the brake booster vacuum sensor.
3. If equipped, disconnect the Four-Wheel Drive (4WD) vacuum reservoir supply hose from the brake booster vacuum sensor.
4. Disconnect the vacuum sensor electrical connector and remove the vacuum sensor.
5. **NOTE:** To allow proper drainage of any moisture, the vacuum sensor must be installed in the same position and orientation as removed.

To install, reverse the removal procedure.

mcx30.com