


SECTION 211-05: Steering Column Switches
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Ignition Switch

NOTE: Manual column shown, power column similar.

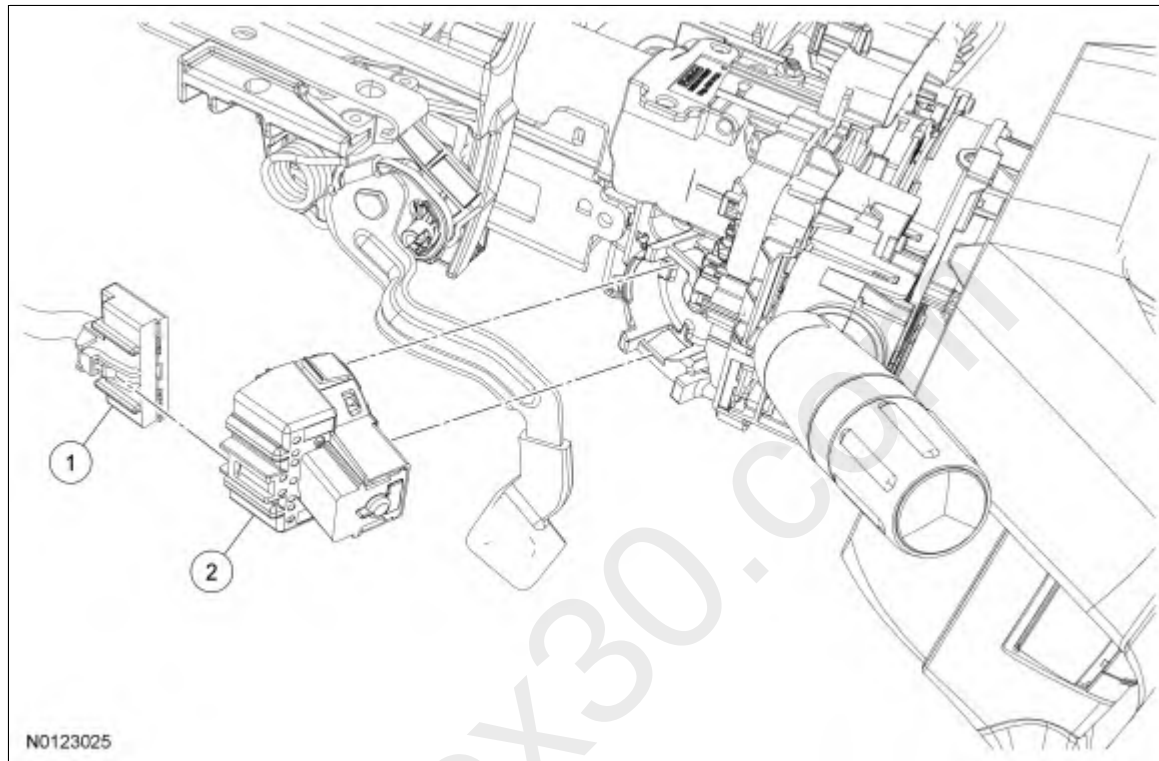

Item	Part Number	Description
1	—	Ignition switch electrical connector (part of 14401)
2	11572	Ignition switch

Removal and Installation

Manual and Power Columns


1. Remove the steering column shrouds. For additional information, refer to [Section 211-04](#).
2. Disconnect the ignition switch electrical connector.

Manual Columns

3. Place the steering column tilt lever in the unlocked position.

Manual and Power Columns

4. Press the 2 locking tabs and remove the ignition switch.

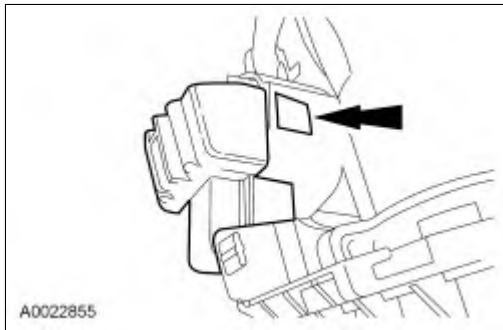

5. To install, reverse the removal procedure.
-

mcx30.com