


SECTION 303-01D: Engine — 6.2L (2V)
IN-VEHICLE REPAIR

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Engine Oil Pressure (EOP) Switch

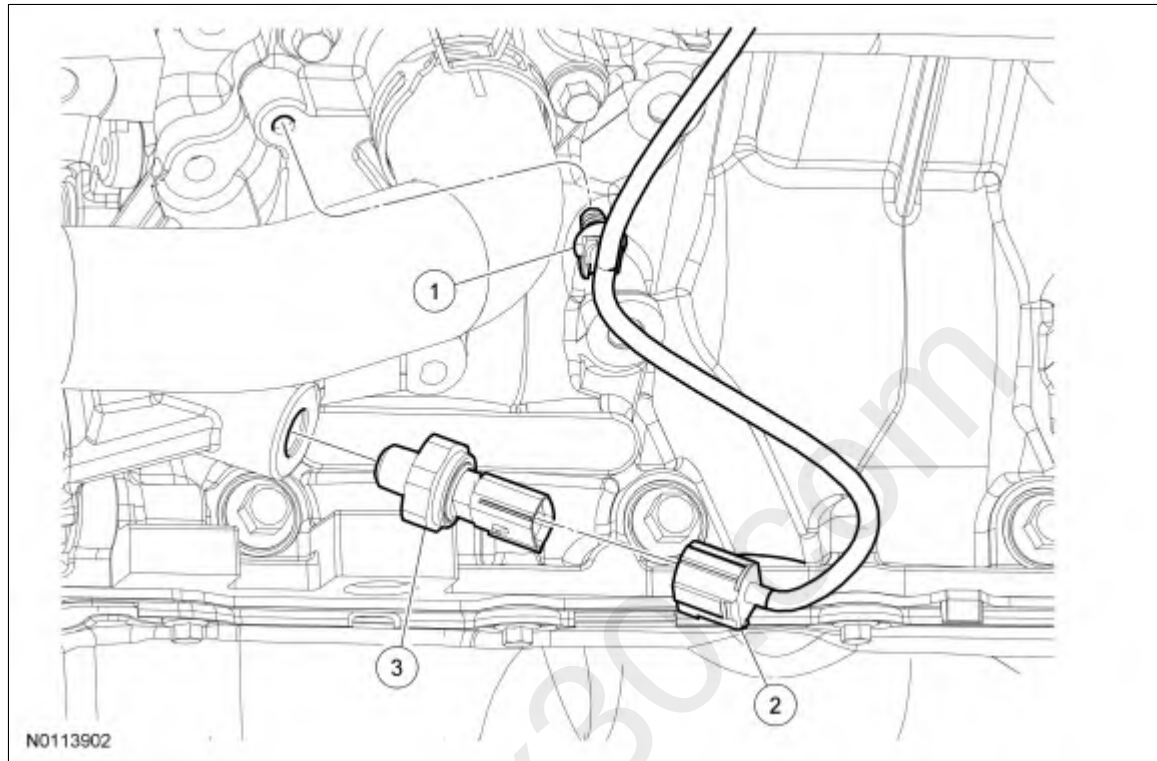

Item	Part Number	Description
1	—	Engine Oil Pressure (EOP) switch electrical connector (part 12C508)
2	—	EOP switch wiring harness retainer (part 12C508)
3	9278	EOP switch

Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Disconnect the Engine Oil Pressure (EOP) switch wiring harness retainer and the electrical connector.
3. Remove the EOP switch.

Installation

1. Install the EOP switch.
 - Stage 1: Tighten to 14 Nm (124 lb-in).
 - Stage 2: Tighten an additional 180 degrees.

2. Connect the EOP switch electrical connector and attach the wiring harness retainer.
-

mcx30.com