


SECTION 303-07A: Engine Ignition — 3.5L GTDI
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013


Engine Ignition Components — Exploded View

NOTE: Ignition Components RH Side

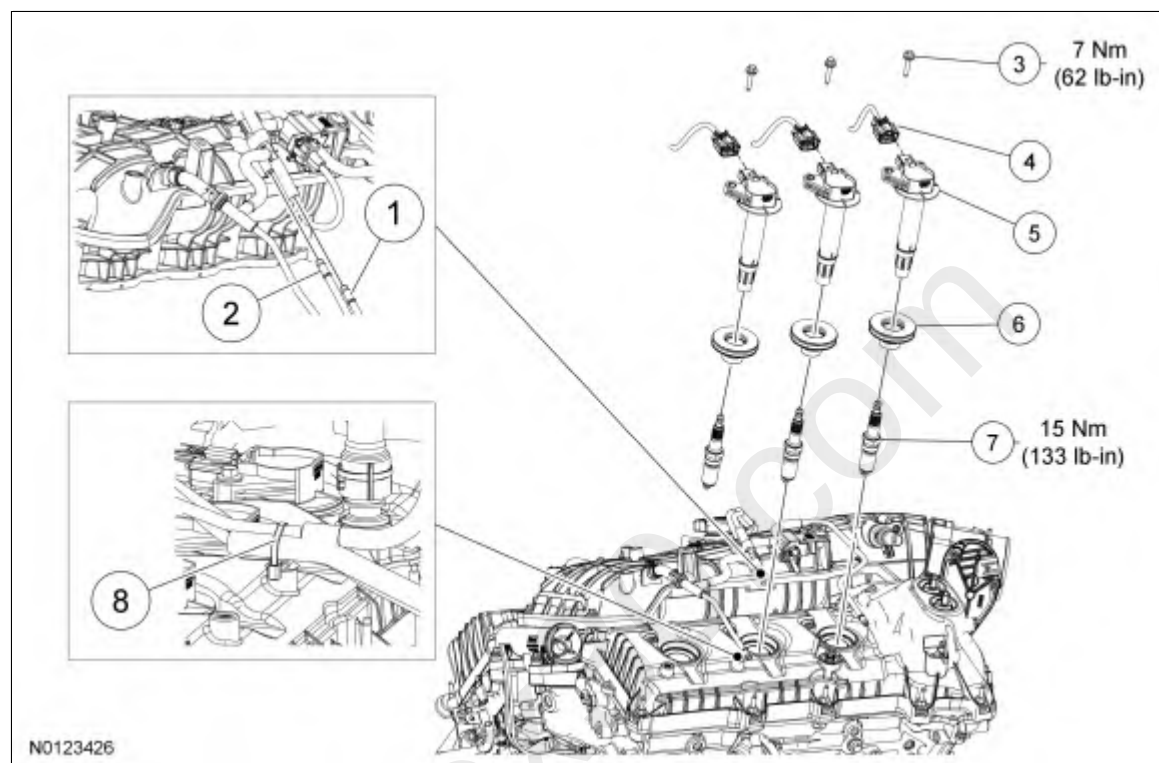

Item	Part Number	Description
1	—	Turbocharger regulator hose part of (9961)
2	—	Turbocharger regulator hose part of (9961)
3	W714507	Ignition coil-on-plug bolt (3 required)
4	—	Ignition coil-on-plug electrical connector (part of 12A581) (3 required)
5	12029	Ignition coil-on-plug (3 required)
6	12025	Coil-on-plug seal (3 required)
7	12405	Spark plug (3 required)
8	—	Tie strap

NOTE: Ignition Components LH Side

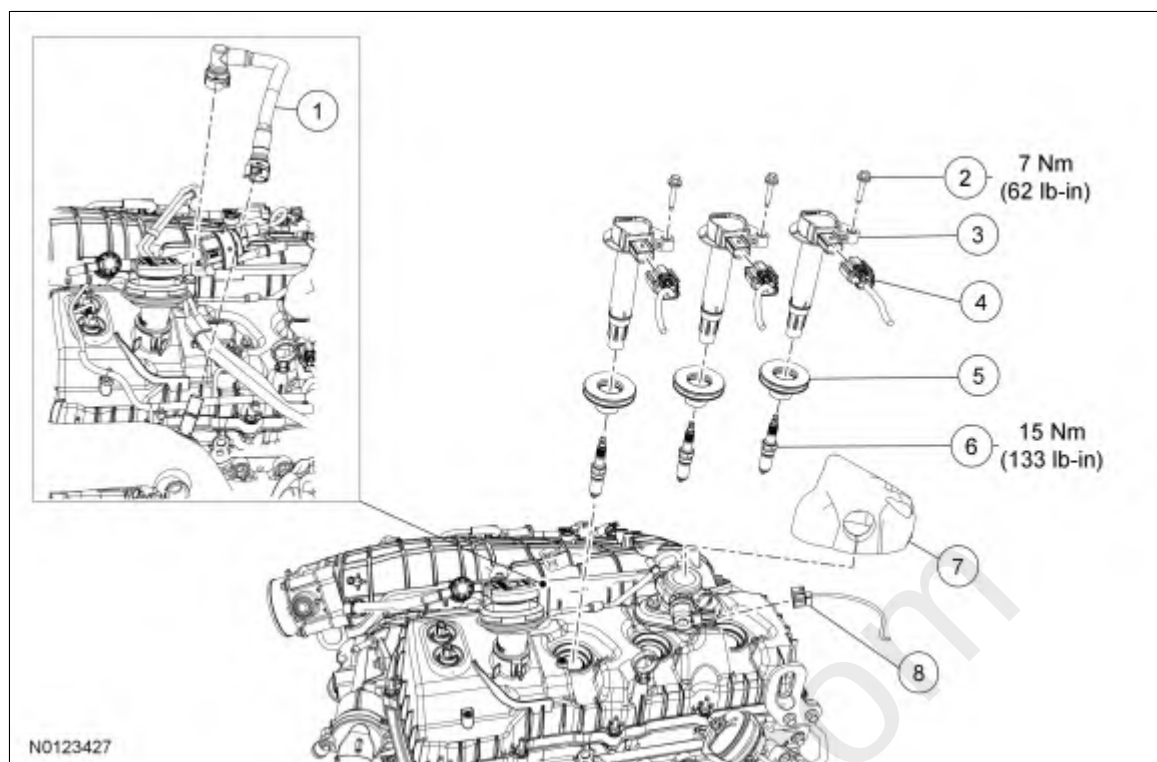

Item	Part Number	Description
1	6758	Crankcase vent tube assembly
2	W714507	Ignition coil-on-plug bolt (3 required)
3	12029	Ignition coil-on-plug (3 required)
4	—	Ignition coil-on-plug electrical connector (part of 12A581) (3 required)
5	12025	Coil-on-plug seal (3 required)
6	12405	Spark plug (3 required)
7	6N041	Fuel injection pump noise insulator shield
8	—	Fuel injection pump electrical connector (part of 12A581)

1. Refer to the procedures and/or exploded views in this section for any Warnings, Notices, Notes, Materials, Specifications, and Special Tools. Items in the exploded views may not be listed in order of removal.

mcx30.com