


SECTION 303-07C: Engine Ignition — 5.0L (4V)
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Engine Ignition Components — Exploded View

LH Ignition Components

NOTE: RH side shown, LH side similar

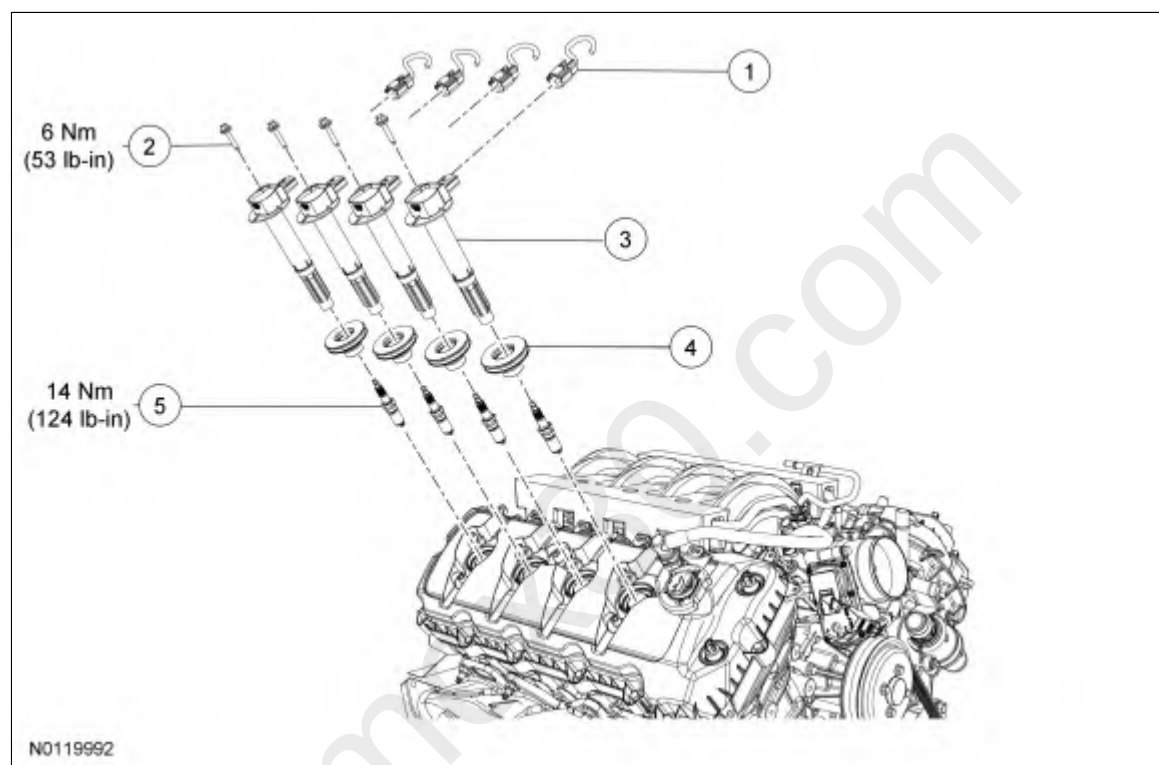

Item	Part Number	Description
1	—	Ignition coil-on-plug electrical connector (part of 9D930) (4 required)
2	W714507	Ignition coil-on-plug bolt (4 required)
3	12029	Ignition coil-on-plug (4 required)
4	12025	Ignition coil-on-plug seal (part of 12029) (4 required)
5	12405	Spark plug (4 required)

1. Refer to the procedures and/or exploded views in this section for any Warnings, Notices, Notes, Materials, Specifications, and Special Tools. Items in the exploded views may not be listed in order of removal.

mcx30.com