 
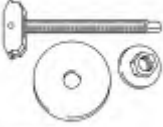


SECTION 307-01: Automatic Transaxle/Transmission — 6R80
DISASSEMBLY

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Transmission — Early Build

Special Tool(s)

 ST1631-A	Handle, Torque Converter 307-091 (T81P-7902-C)
 ST1186-A	Holding Fixture, Transmission 307-003 (T57L-500-B)
 ST1433-B	Installer, Front Wheel Hub Oil Seal 205-256
 ST2381-A	Remover, Input Shaft Oil Seal 308-375
 E173280	Remover, Koastal Sleeve 307-717
 ST2932-A	Remover, Needle Bearing 307-562 (includes 307-562/1 and 307-562/2)
	Remover, Pilot Bearing 308-001 (T58L-101-B)