

SECTION 307-05: Automatic Transaxle/Transmission External Controls
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Tow/Haul Switch — Floor Shift

NOTE: The Tow/Haul switch is part of the selector lever knob.

1. To install a new Tow/Haul switch, a new selector lever knob must be installed. For additional information, refer to [Selector Lever Knob](#) in this section.
-

mcx30.com