


SECTION 308-07B: Transfer Case
IN-VEHICLE REPAIR

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Transfer Case Rear Output Shaft Seal

Special Tool(s)


 ST2261-A	Installer, Input Shaft Oil Seal 308-249 (T96T-7127-A)
---	--

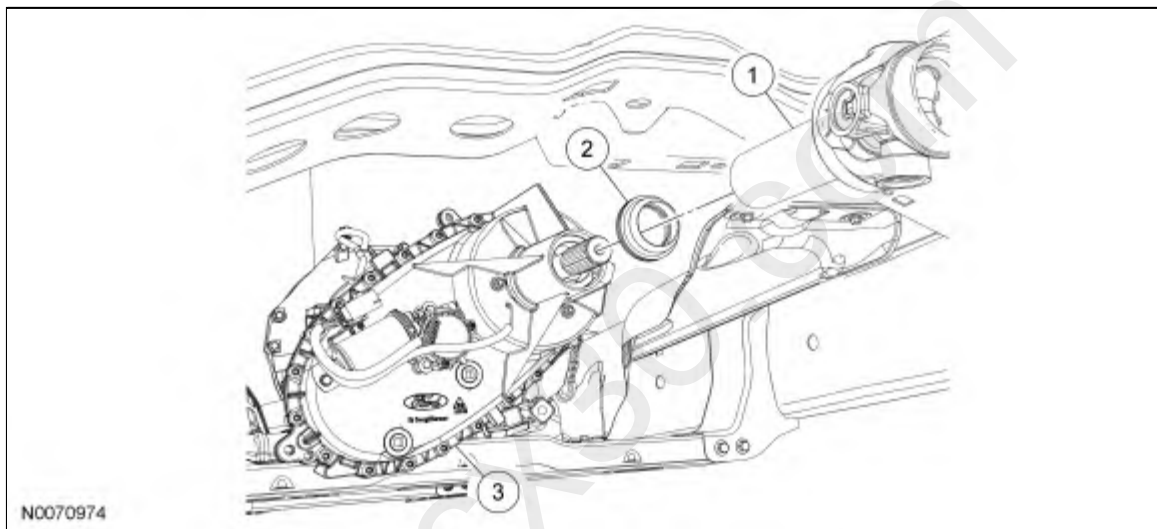

Item	Part Number	Description
1	4602	Driveshaft
2	7B215	Rear output shaft seal
3	7A195	Transfer case


Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Remove the rear driveshaft. For additional information, refer to [Section 205-01](#).
3. Using a suitable seal puller, remove the rear output shaft seal.

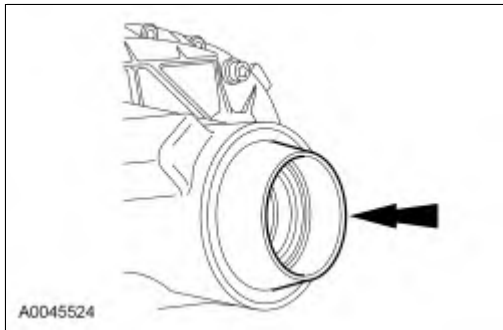

Installation

1. Using the Input Shaft Oil Seal Installer, install the rear output shaft seal.

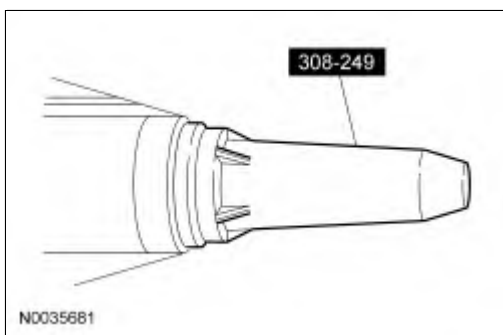

2. Install the rear driveshaft. For additional information, refer to [Section 205-01](#).
-