


SECTION 310-01: Fuel Tank and Lines
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Fuel Level Sender

Removal and Installation

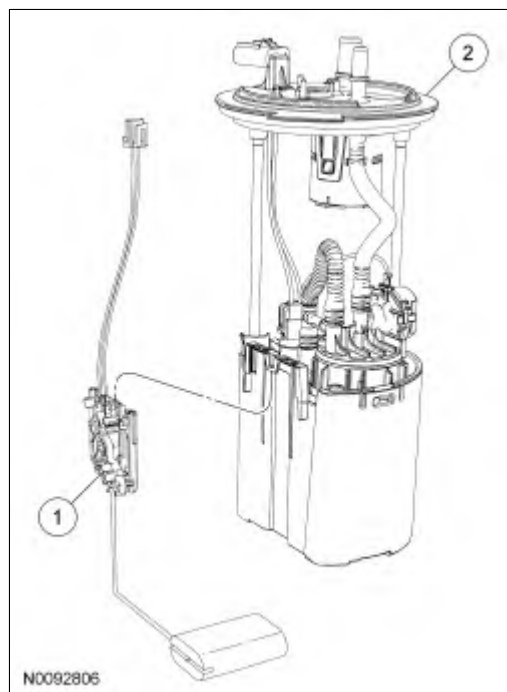


Item	Part Number	Description
1	9A299	Fuel level sender
2	9H307	Fuel Pump (FP) module




WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

1. Remove the Fuel Pump (FP) module. For additional information, refer to [Fuel Pump Module](#) in this section.
2. Disconnect the fuel level sender-to- FP module electrical connector.

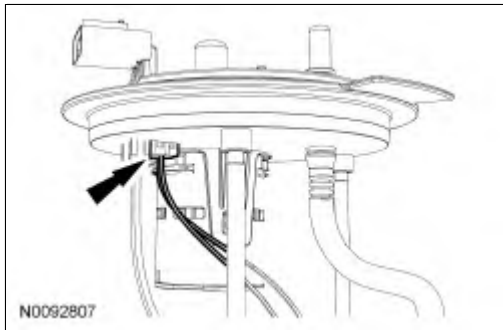

3. Disconnect the FP module retainer clip and slide the fuel level sender off of the FP module.

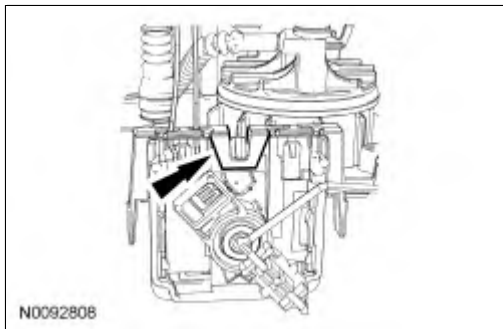

4. To install, reverse the removal procedure.
-