


SECTION 412-01: Climate Control
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Blower Motor Resistor

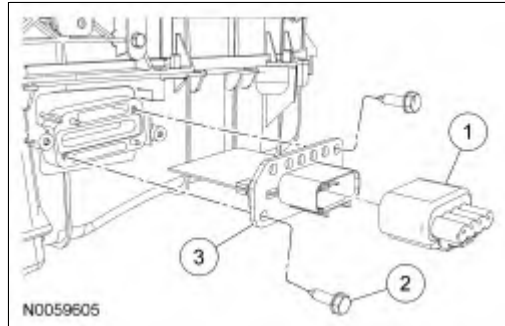

Item	Part Number	Description
1	—	Blower motor resistor electrical connector (part of 18B518)
2	W701696	Blower motor resistor screw (2 required)
3	18591	Blower motor resistor

Removal and Installation

1. Disconnect the blower motor resistor electrical connector.
2. Remove the 2 blower motor resistor screws.
3. Remove the blower motor resistor.
4. To install, reverse the removal procedure.

mcx30.com