

Message Center Configuration

Oil Life Reset — Message Center Instrument Cluster (IC)

1. Press and release the SETUP button until the message center displays OIL LIFE XXX% HOLD RESET = NEW OIL.
2. Press and hold the RESET button for 2 seconds and release when the message center displays OIL LIFE SET TO XXX%.
3. Press and release the SETUP button to exit the procedure.

Oil Life Reset — Base Instrument Cluster (IC)

NOTE: All message center functions are carried out using the single stem SELECT/RESET button in the Instrument Cluster (IC).

1. Press and release the SELECT/RESET button to scroll through the information displays until the message center displays HOLD RESET FOR SETUP MENU.
2. Press and hold the SELECT/RESET button for approximately 2 seconds until the message center displays OIL LIFE XXX% HOLD RESET = NEW.
3. Press and hold the SELECT/RESET button for approximately 2 seconds until the message center displays OIL LIFE SET TO XXX%.
4. Release the SELECT/RESET button and allow the setup timer to expire to exit the procedure.

Oil Life Start Value — Message Center Instrument Cluster (IC)

1. Press and release the SETUP button until the message center displays OIL LIFE XXX% HOLD RESET = NEW OIL.
2. Press and hold the RESET button for 2 seconds and release when the message center displays OIL LIFE SET TO XXX%.
3. Press and release the RESET button to decrease the oil life start value (from 100% to 10%) for each 10% reduction until the desired oil life start value is displayed.
4. Press and release the SETUP button to exit the procedure.

Oil Life Start Value — Base Instrument Cluster (IC)

NOTE: All message center functions are carried out using the single stem SELECT/RESET button in the IC.

1. Press and release the SELECT/RESET button to scroll through the information displays until the message center displays HOLD RESET FOR SETUP MENU.
2. Press and hold the SELECT/RESET button for approximately 2 seconds until the message center displays OIL LIFE XXX% HOLD RESET = NEW.
3. Press and hold the SELECT/RESET button for approximately 2 seconds until the message center displays OIL LIFE SET TO XXX%.
4. **NOTE:** The oil life start value reduces by 10% for each second that the SELECT/RESET button is held once the oil life start value begins decreasing.

Continue to hold the SELECT/RESET button until the oil life begins to decrease in value (from 100% down to 10%), continuing to hold until the desired start value is displayed.

5. Release the SELECT/RESET button and allow the setup timer to expire to exit the procedure.
-