


SECTION 414-05: High Voltage Converter/Power Point Inverter
REMOVAL AND INSTALLATION

2014 F-150 Workshop Manual
Procedure revision date: 10/25/2013

Alternating Current (AC) Power Point

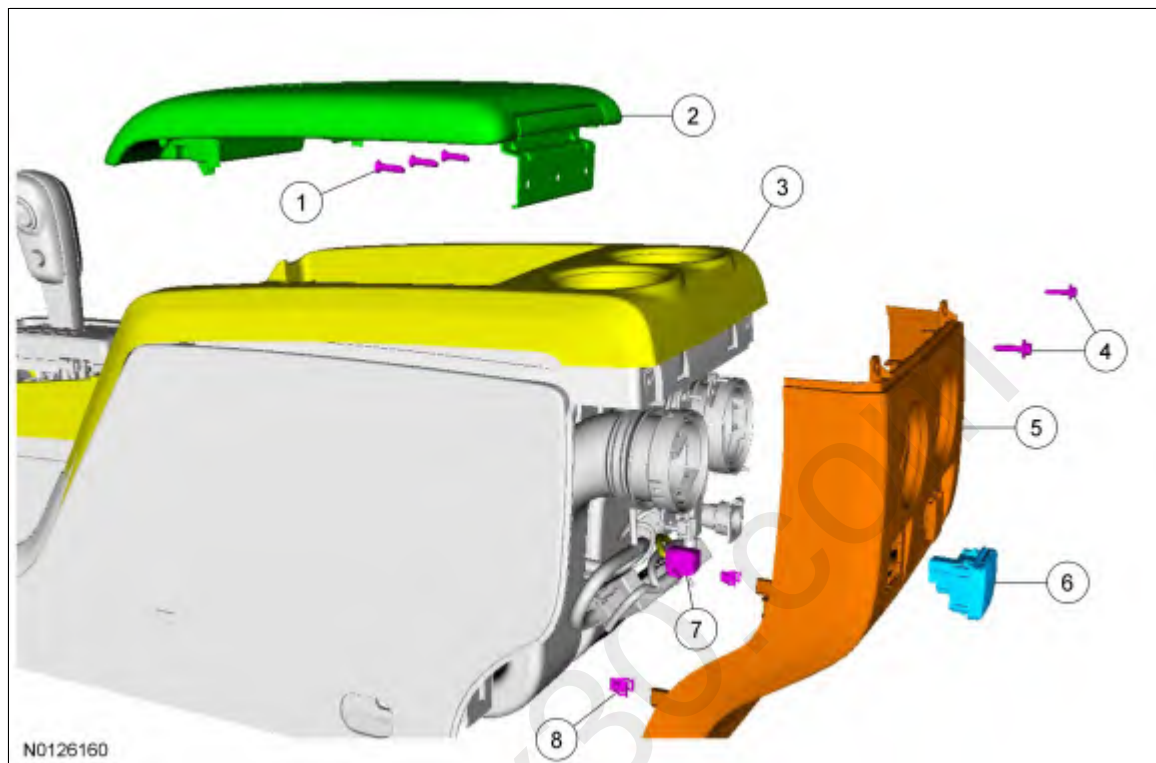

Item	Part Number	Description
1	N808641	Storage compartment door screw (3 required)
2	06024	Storage compartment door
3	04567A	Selector lever trim panel
4	W707628	Floor console rear panel screws (2 required)
5	045E24	Floor console rear panel
6	19N236	AC powerpoint
7	14A318	AC powerpoint electrical connector
8	W705289	Floor console rear panel retaining clip (2 required)



WARNING: Disconnect the 12 volt battery before servicing the direct current to alternating current (DC-AC) inverter or alternating current (AC) powerpoint to prevent the risk of high voltage shock. Failure to follow this instruction may result in serious personal injury.

1. Remove the 3 screws and the storage compartment door.
2. **NOTICE:** Raise the selector lever trim panel only enough to access the floor console rear panel screws. If the selector lever trim panel is raised excessively, component damage may occur.

Lift the rear portion of the selector lever trim panel to release the retaining clips.

3. Remove the 2 floor console rear panel screws.
 4. Using a non-marring tool, gently pry the lower portion of the floor console rear panel to release the 2 retaining clips.
 5. Disconnect the AC powerpoint electrical connector.
 6. Press the AC powerpoint retainers inward and remove the AC powerpoint.
 7. To install, reverse the removal procedure.
-

mcx30.com