

H4 CHECK FOR CORRECT HUD (HEAD UP DISPLAY) OPERATION

Ignition OFF.

Disconnect and inspect HUD module connector and related in-line connectors.

Repair:

corrosion (install new connector or terminals - clean module pins)

damaged or bent pins - install new terminals/pins

pushed-out pins - install new pins as necessary

Reconnect the HUD module connector and related in-line connectors. Make sure they seat and latch correctly.

Operate the system and determine if the concern is still present.


Is the concern still present?

Yes	CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW TSB instructions. If no Technical Service Bulletins (TSBs) address this concern, INSTALL a new HUD module. REFER to: Head Up Display (HUD) Module .
No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.

REMOVAL AND INSTALLATION > HEAD UP DISPLAY (HUD) MODULE > REMOVAL

1.

Using a non-marring tool, release the heads up display tab and position the heads up display aside.

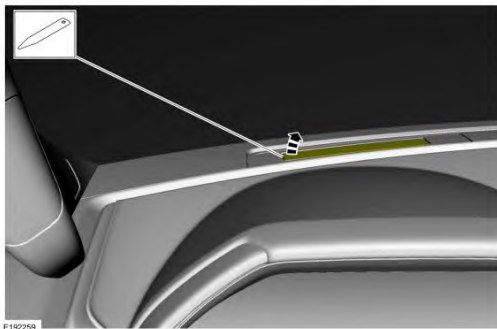

2.

Disconnect the electrical connector and remove the heads up display.