

|          |                                                                |                                                                                                                                                                                                                                                                                                                              |
|----------|----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|          |                                                                | Diagnostic Trouble Codes (DTCs) first. After the cause of the concern is corrected, CLEAR the Diagnostic Trouble Codes (DTCs). WAIT at least 10 seconds. REPEAT the self-test. If DTC U1000:00 is retrieved again, INSTALL a new FCIM. REFER to: Front Controls Interface Module (FCIM) .                                    |
| U2100:00 | Initial Configuration Not Complete:<br>No Sub Type Information | This DTC sets due to an incorrect or incomplete FCIM configuration. Using a diagnostic scan tool, PERFORM the FCIM programming procedure using as-built data. For information on as-built data, REFER to: Module Configuration - System Operation and Component Description . See As-Built Data.                             |
| U3000:41 | Control Module: General<br>Checksum Failure                    | CLEAR the Diagnostic Trouble Codes (DTCs).<br>WAIT at least 10 seconds.<br>REPEAT the self-test.<br>If DTC U3000:41 is retrieved again, INSTALL a new FCIM. REFER to: Front Controls Interface Module (FCIM) .                                                                                                               |
| U3000:49 | Control Module: Internal Electronic<br>Failure                 | ADDRESS all other FCIM Diagnostic Trouble Codes (DTCs) first.<br>After the cause of the concern is corrected, CLEAR the Diagnostic Trouble Codes (DTCs).<br>WAIT at least 10 seconds.<br>REPEAT the self-test.<br>If DTC U3000:49 is retrieved again, INSTALL a new FCIM. REFER to: Front Controls Interface Module (FCIM) . |
| U3003:16 | Battery Voltage: Circuit Voltage<br>Below Threshold            | GO to Pinpoint Test X                                                                                                                                                                                                                                                                                                        |
| U3003:17 | Battery Voltage: Circuit Voltage<br>Above Threshold            | GO to Pinpoint Test Y                                                                                                                                                                                                                                                                                                        |