

Ignition OFF.

Disconnect and inspect all the BCM connectors.

Repair:

Corrosion (clean module pins or install new connectors or terminals)

Damaged or bent pins (install new terminals or pins)

Pushed-out pins (install new pins as necessary)

Reconnect the BCM connectors. Make sure they seat and latch correctly.

Operate the system and determine if the concern is still present.

Is the concern still present?

Yes	CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW the TSB instructions. If no Technical Service Bulletins (TSBs) address this concern, INSTALL a new BCM. REFER to: Body Control Module (BCM) .
No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.

**DIAGNOSIS AND TESTING > INFORMATION AND ENTERTAINMENT SYSTEM >
PINPOINT TESTS > PINPOINT TEST R : U0151:00**

Normal Operation and Fault Conditions

REFER to: Information and Entertainment System - System Operation and Component Description . See Network Message Chart.

DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
U0151:00	Lost Communication With Restraints Control Module: No Sub Type Information	Set by the FCIM when the airbag deployment notification message from the RCM is missing for more than 5 seconds with the ignition in RUN.

Possible Source

- RCM

DIAGNOSIS AND TESTING > INFORMATION AND ENTERTAINMENT SYSTEM >