


3.

Disconnect the antenna cable, the push pin retainer and remove the cable following the routing shown below.

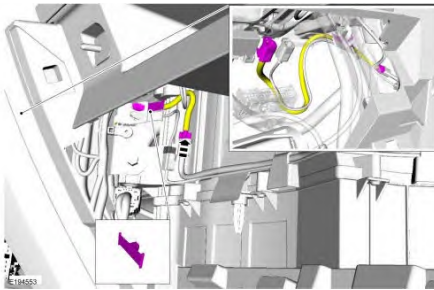

## REMOVAL AND INSTALLATION > AUDIO UNIT ANTENNA CABLE > INSTALLATION

1.

To install, reverse the removal procedure.

## REMOVAL AND INSTALLATION > FRONT CONTROL DISPLAY INTERFACE MODULE (FCDIM) > REMOVAL



**NOTE:** Removal steps in this procedure may contain installation details.

1.



**NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the FCDIM following the on-screen instructions.