

2.

Remove the FCIM. Refer to: Front Controls Interface Module (FCIM) .


3.

Remove the bolts and the FCDIM.

Disconnect the electrical connector.

Torque

: 22 lb.in (2.5 Nm)

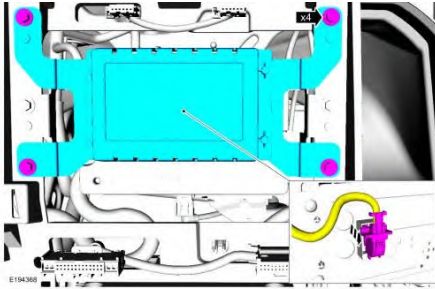

REMOVAL AND INSTALLATION > FRONT CONTROL DISPLAY INTERFACE MODULE (FCDIM) > INSTALLATION

1.

To install, reverse the removal procedure.

2.



NOTE: This step is only necessary if replacing the component.

Using a diagnostic scan tool, complete the PMI process for the FCDIM following the on-screen instructions.

REMOVAL AND INSTALLATION > FRONT CONTROLS INTERFACE MODULE (FCIM)

Special Tool(s) / General Equipment

Interior Trim Remover