

Disconnect the electrical connector.

2.

Remove the satellite radio antenna bolt.

Torque

: 62 lb.in (7 Nm)

3.

Remove the satellite radio antenna retainer.

4.

Remove the satellite radio antenna from the roof.



REMOVAL AND INSTALLATION > SATELLITE RADIO ANTENNA > INSTALLATION

Existing antenna

1.

To install, reverse the removal procedure.

New antenna

2.



NOTE: If installing a new satellite radio antenna it is not necessary to remove the bolt from the satellite radio antenna base.

Install the satellite radio harness through the roof open and push the base down until fully seated.