

DIAGNOSIS AND TESTING > INTERIOR LIGHTING > SYMPTOM CHART(S)

Diagnostics in this article assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: Diagnostic Methods .

Symptom Chart: Interior Lighting

Symptom Chart

Condition	Possible Sources	Actions
A module does not respond to the scan tool	Fuse Wiring, terminals or connectors Module	REFER to: Communications Network .
The courtesy lamps do not illuminate with a door open	Refer to the Pinpoint Test	GO to Pinpoint Test A
One or more interior courtesy lamps are inoperative	Refer to the Pinpoint Test	GO to Pinpoint Test B
A puddle lamp is inoperative or always on	Refer to the Pinpoint Test	GO to Pinpoint Test G
All the courtesy lamps stay on continuously	Refer to the Pinpoint Test	GO to Pinpoint Test C
The interior courtesy lamps stay on continuously	Refer to the Pinpoint Test	GO to Pinpoint Test D
One or more demand lamps are inoperative	Refer to the Pinpoint Test	GO to Pinpoint Test E
The cargo lamps, bed lamps or trailer assist lamp is inoperative or always on	Refer to the Pinpoint Test	GO to Pinpoint Test J
The battery saver does not deactivate after time-out	Refer to the Pinpoint Test	GO to Pinpoint Test F
The ambient lighting is inoperative or always on	Refer to the Pinpoint Test	GO to Pinpoint Test H
One or more of the ambient lighting Light Emitting Diodes (LEDs) are inoperative or do not change color/intensity	Refer to the Pinpoint Test	GO to Pinpoint Test I

DIAGNOSIS AND TESTING > INTERIOR LIGHTING > PINPOINT TESTS > PINPOINT TEST A : THE COURTESY LAMPS DO NOT ILLUMINATE WITH A DOOR OPEN

Refer to Remote Keyless Entry and Alarm for schematic and connector information.