

latch correctly.

Operate the system and determine if the concern is still present.

Is the concern still present?

Yes	CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW TSB instructions. If no Technical Service Bulletins (TSBs) address this concern,
No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues. CLEAR the Diagnostic Trouble Codes (DTCs).

DIAGNOSIS AND TESTING > INTERIOR LIGHTING > PINPOINT TESTS > PINPOINT TEST F : THE BATTERY SAVER DOES NOT DEACTIVATE AFTER TIME-OUT

Refer to Interior Lamps for schematic and connector information.

Normal Operation and Fault Conditions

REFER to: Interior Lighting - System Operation and Component Description .

Possible Sources

- Wiring, terminals or connectors
- BCM

DIAGNOSIS AND TESTING > INTERIOR LIGHTING > PINPOINT TESTS > PINPOINT TEST F : THE BATTERY SAVER DOES NOT DEACTIVATE AFTER TIME-OUT > PINPOINT TEST F : THE BATTERY SAVER DOES NOT DEACTIVATE AFTER TIME-OUT

F1 CHECK THE DEMAND LAMP VOLTAGE SUPPLY CIRCUIT FOR A SHORT TO VOLTAGE

Ignition OFF.

Disconnect: BCM C2280C .

Turn any demand (map or vanity mirror) lamp on.

Does the demand lamp turn on?

Yes	REPAIR the circuit.
No	GO to F2