

Operate the system and determine if the concern is still present.

Is the concern still present?

Yes	CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW TSB instructions. If no Technical Service Bulletins (TSBs) address this concern,
No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues. CLEAR the Diagnostic Trouble Codes (DTCs).

DIAGNOSIS AND TESTING > INTERIOR LIGHTING > PINPOINT TESTS > PINPOINT TEST I : ONE OR MORE OF THE AMBIENT LIGHTING LIGHT EMITTING DIODES (LEDs) ARE INOPERATIVE OR DO NOT CHANGE COLOR/INTENSITY

Refer to Interior Lamps for schematic and connector information.

Normal Operation and Fault Conditions

REFER to: Interior Lighting - System Operation and Component Description .

DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
B1465:00	Ambient Lighting Bus 1: No Sub Type Information	Sets when the BCM detects a fault in the LIN circuit to the door ambient lighting Light Emitting Diodes (LEDs).
B1467:00	Ambient Lighting Bus 3: No Sub Type Information	Sets when the BCM detects a fault in the LIN circuit to the footwell and center console ambient lighting Light Emitting Diodes (LEDs).

Possible Sources

- Wiring, terminals or connectors
- Ambient lighting LED
- BCM

DIAGNOSIS AND TESTING > INTERIOR LIGHTING > PINPOINT TESTS > PINPOINT TEST I : ONE OR MORE OF THE AMBIENT LIGHTING LIGHT EMITTING DIODES (LEDs) ARE INOPERATIVE OR DO NOT CHANGE COLOR/INTENSITY > PINPOINT