

DIAGNOSIS AND TESTING > INTERIOR LIGHTING > PINPOINT TESTS > PINPOINT TEST J : THE CARGO LAMPS, BED LAMPS OR TRAILER ASSIST LAMP IS INOPERATIVE OR ALWAYS ON

Refer to Interior Lamps for schematic and connector information.

Normal Operation and Fault Conditions

REFER to: Interior Lighting - System Operation and Component Description .

DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
B12C2:11	Puddle Lamp: Circuit Short To Ground	A continuous memory and on-demand DTC that sets when the BCM detects a short to ground from the cargo and trailer assist lamps output circuit.
B12C2:15	Puddle Lamp: Circuit Short To Battery or Open	A continuous memory and on-demand DTC that sets when the BCM detects an open or short to voltage from the cargo and trailer assist lamps output circuit.
B14A7:11	Puddle/Cargo Switch Input: Circuit Short To Ground	A continuous and on-demand DTC that sets when the BCM detects a short to ground on the cargo lamp switch (integrated into the headlamp switch) input circuit.
B14D8:11	Bed Lamp Output: Circuit Short To Ground	A continuous memory and on-demand DTC that sets when the BCM detects a short to ground from the bed lamps output circuit.
B14D8:15	Bed Lamp Output: Circuit Short To Battery or Open	A continuous memory and on-demand DTC that sets when the BCM detects an open or short to voltage from the bed lamps output circuit.
U1000:00	Solid State Driver Protection Active -Driver Disabled: No Sub Type Information	This DTC sets when the BCM has temporarily shut down the output driver. The module has temporarily disabled an output because an excessive current draw exists (such as a short to ground). The BCM cannot enable the output until the cause of the short is corrected, the Diagnostic