

Place the ignition in the OFF position.

8.

Verify the RKE works correctly.

REMOVAL AND INSTALLATION > BODY CONTROL MODULE (BCM) > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.



NOTE: If the BCM did not respond to the diagnostic scan tool, As-Built Data may need to be entered as part of the repair. This step is only necessary if the BCM is being replaced

Using a diagnostic scan tool, begin the PMI process for the BCM following the on-screen instructions.

2.




NOTE: The PAM is integral to the BCM. This step is only necessary if the BCM is being replaced.

Using a diagnostic scan tool, begin the PMI process for the PAM following the on-screen instructions.

3.

Release the clips and remove the RH side front scuff plate.

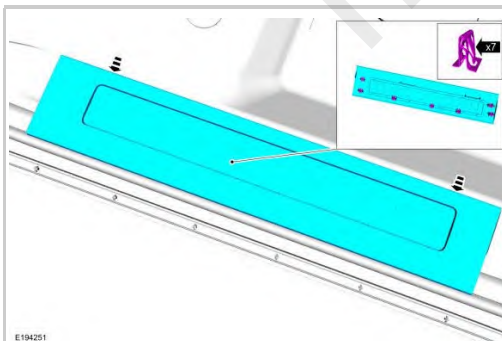

4.

1.

Position aside the weather strip.