



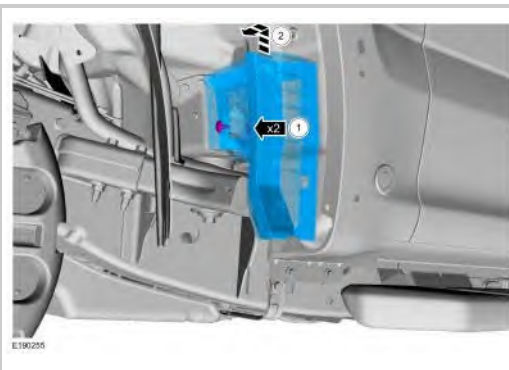

5.

Disconnect the active park assist sensor electrical connector.

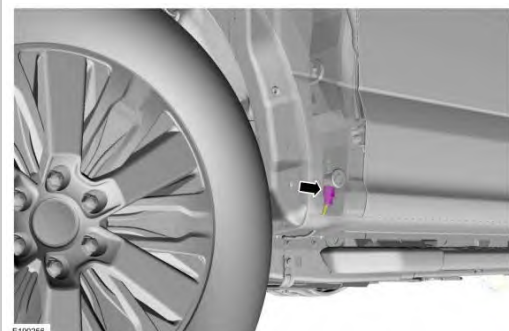

6.

Remove the active park assist sensor.

1.

Release the tabs.

2.

Remove the active park assist sensor from the bracket.

REMOVAL AND INSTALLATION > FRONT ACTIVE PARK ASSIST SENSORS > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Align the active park assist service. Refer to: Azimuth System Check .