

Service Manual: REMOTE CONVENIENCE

DESCRIPTION AND OPERATION > UNIVERSAL TRANSMITTER - OVERVIEW > OVERVIEW

The universal transmitter operates garage doors, gates and home or office lighting and security systems.

DESCRIPTION AND OPERATION > UNIVERSAL TRANSMITTER - SYSTEM OPERATION AND COMPONENT DESCRIPTION

System Operation

DESCRIPTION AND OPERATION > UNIVERSAL TRANSMITTER - SYSTEM OPERATION AND COMPONENT DESCRIPTION > UNIVERSAL TRANSMITTER

The universal transmitter learns a hand-held transmitter radio frequency code and stores the code in memory. It consists of 3 buttons with an indicator lamp. Once the universal transmitter code is stored, the universal transmitter emits the radio frequency of the hand-held transmitter when the corresponding button is pressed. The universal transmitter can store 3 unique transmitter codes at a time. The universal transmitter and LH vanity mirror lamp are part of the LH sun visor and share the same power and ground circuits.

DIAGNOSIS AND TESTING > UNIVERSAL TRANSMITTER

Symptom Chart(s)

Symptom Chart: Universal Home Transmitter

Diagnostics in this service information assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: Diagnostic Methods .

Symptom Chart

Condition	Possible Sources	Actions
The universal transmitter is inoperative	Interior lamps concern Universal transmitter (part of the LH sun visor)	GO to Pinpoint Test A

DIAGNOSIS AND TESTING > UNIVERSAL TRANSMITTER > PINPOINT TESTS > PINPOINT TEST A : UNIVERSAL TRANSMITTER IS INOPERATIVE