

Yes	REPAIR the circuit.
No	GO to E7

E7 CHECK THE BCM (BODY CONTROL MODULE) KEY INHIBIT GROUND CONTROLLED CIRCUIT FOR AN OPEN

Connect BCM C2280B .

Ignition OFF.

Disconnect BCM C2280B .

Measure:

Positive Lead	Measurement / Action	Negative Lead
C3245-4	Ω	C2280B-12

Is the resistance less than 3 ohms?

Yes	GO to E8
No	REPAIR the circuit.

E8 CHECK FOR CORRECT BCM (BODY CONTROL MODULE) OPERATION

Disconnect and inspect all BCM connectors.

Repair:

corrosion (install new connector or terminals - clean module pins)

damaged or bent pins - install new terminals/pins

pushed-out pins - install new pins as necessary

Reconnect the BCM connectors and all other previously disconnected connectors. Make sure they seat and latch correctly.

Operate the system and determine if the concern is still present.

Is the concern still present?

Yes	
No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.