

- BCM

DIAGNOSIS AND TESTING > STEERING WHEEL AND COLUMN ELECTRICAL COMPONENTS > PINPOINT TESTS > PINPOINT TEST H : THE IGNITION MODE INDICATOR IS ALWAYS ON > PINPOINT TEST H : THE IGNITION MODE INDICATOR IS ALWAYS ON



NOTE: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.

H1 ISOLATE THE BCM (BODY CONTROL MODULE)

Ignition ON.

Disconnect BCM C2280B .

Observe the ignition mode indicator.

Does the ignition mode indicator continue to illuminate?

Yes	GO to H2
No	GO to H3

H2 CHECK THE IGNITION MODE INDICATOR CIRCUIT FOR A SHORT TO VOLTAGE

Disconnect Push Button Ignition Switch C2195 .

Measure:

Positive Lead	Measurement / Action	Negative Lead
C2195-2		Ground

Is any voltage present?

Yes	REPAIR the circuit.
No	INSTALL a new ignition switch. REFER to: Ignition Switch - Vehicles With: Keyless Vehicle System .

H3 CHECK FOR CORRECT BCM (BODY CONTROL MODULE) OPERATION

Ignition OFF.

Disconnect and inspect all BCM connectors.