

- The vehicle is not in PARK.
- A powertrain system DTC is present, illuminating the service engine soon indicator.
- The ignition is on.
- The alarm system is triggered.
- The vehicle battery voltage is low.

For additional information regarding the remote start system, refer to the Owner's Literature.

DESCRIPTION AND OPERATION > HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS - SYSTEM OPERATION AND COMPONENT DESCRIPTION > AUTOLOCK

The autolock feature locks all of the doors after all of the following have occurred:

- All the doors are closed.
- The ignition is on.
- The vehicle is shifted into any gear to put the vehicle in motion.
- The vehicle attains a speed greater than 20 km/h (12.4 mph).

The auto lock feature activates again during the same ignition cycle when all of the following have occurred:

- The vehicle speed is reduced to less than 15 km/h (9.3 mph).
- A door is opened and then closed.
- The vehicle attains a speed greater than 20 km/h (12.4 mph).

The autolock feature can be enabled/disabled through the message center.

DESCRIPTION AND OPERATION > HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS - SYSTEM OPERATION AND COMPONENT DESCRIPTION > AUTO-UNLOCK



NOTE: The doors do not auto-unlock if the vehicle has been electronically locked before the driver door is unlocked.

The auto-unlock feature unlocks all of the doors when all of the following conditions have been met:

- All the doors are closed and locked.
- The ignition was on.
- The vehicle was shifted out of park and a speed greater than 20 km/h (12.4 mph) was achieved.
- The vehicle has come to a stop.
- The ignition transitions to accessory or off and, within 10 minutes, the driver door is opened.