

No

The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.


REMOVAL AND INSTALLATION > IGNITION SWITCH > REMOVAL

1.

Remove the steering column shrouds. Refer to: Steering Column Shrouds .

2.

Disconnect the ignition switch electrical connector.

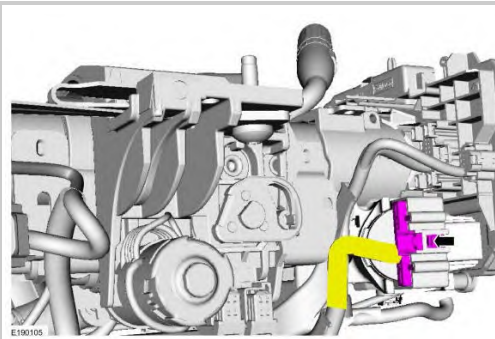


3.

1.

Push in the ignition switch tabs.

2.

Remove the ignition switch.

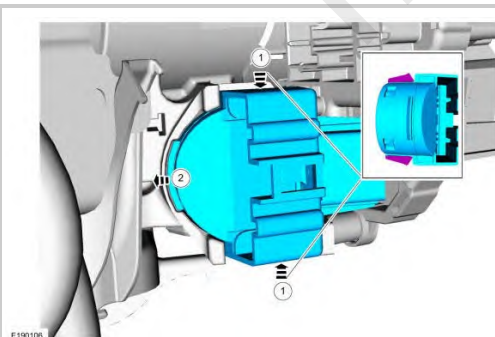

REMOVAL AND INSTALLATION > IGNITION SWITCH > INSTALLATION

1.

To install, reverse the removal procedure.