

	module connections. ADDRESS the root cause of any connector or pin issues.
--	--

DIAGNOSIS AND TESTING > WIPERS AND WASHERS > PINPOINT TESTS > PINPOINT TEST B : THE INTERMITTENT AND/OR LOW SPEED WINDSHIELD WIPERS ARE INOPERATIVE

Refer to Wipers and Washers for schematic and connector information.

Normal Operation and Fault Conditions

REFER to: Wipers and Washers - System Operation and Component Description .

SCCM DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
B1131:08	Wiper motor module: Bus Signal / Message Failure	Sets when the SCCM detects a communication fault with the windshield wiper motor over the LIN.
B1131:11	Wiper motor module: Circuit Short to Ground	Sets when the SCCM detects a short to ground from the windshield wiper motor LIN circuit.

Possible Sources

- Wiring, terminals or connectors
- Wiper/washer switch
- Windshield wiper motor
- Rain sensor
- SCCM

Visual Inspection and Diagnostic Pre-checks

- Inspect the wiper/washer switch for damage

DIAGNOSIS AND TESTING > WIPERS AND WASHERS > PINPOINT TESTS > PINPOINT TEST B : THE INTERMITTENT AND/OR LOW SPEED WINDSHIELD WIPERS ARE INOPERATIVE > PINPOINT TEST B : THE INTERMITTENT AND/OR LOW SPEED WINDSHIELD WIPERS ARE INOPERATIVE



NOTE: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.