

|    |                                                    |
|----|----------------------------------------------------|
| No | ADJUST the pivot arms correctly on the windshield. |
|----|----------------------------------------------------|

## DIAGNOSIS AND TESTING > WIPERS AND WASHERS > PINPOINT TESTS > PINPOINT TEST H : THE WINDSHIELD WASHER IS INOPERATIVE

Refer to Wipers and Washers for schematic and connector information.

### Normal Operation and Fault Conditions

REFER to: Wipers and Washers - System Operation and Component Description .

### Possible Causes

- Wiring, terminals or connectors
- Windshield washer hose
- Windshield washer jet
- Washer pump
- Wiper/washer switch
- Windshield wiper motor
- SCCM

### Visual Inspection and Diagnostic Pre-checks

- Inspect the wiper/washer switch for damage

## DIAGNOSIS AND TESTING > WIPERS AND WASHERS > PINPOINT TESTS > PINPOINT TEST H : THE WINDSHIELD WASHER IS INOPERATIVE > PINPOINT TEST H : THE WINDSHIELD WASHER IS INOPERATIVE



*NOTE: Use the correct probe adapter(s) when making measurements. Failure to use the correct probe adapter(s) may damage the connector.*

### H1 CHECK THE AMBIENT AIR TEMPERATURE

Check the ambient air temperature.

#### Is the ambient air temperature below freezing?

|     |          |
|-----|----------|
| Yes | GO to H2 |
| No  | GO to H4 |