

 **NOTE:** Be prepared to collect escaping fluid.


Remove the washer pump.

1.

Disconnect the washer hose.

2.

Disconnect the electrical connector.

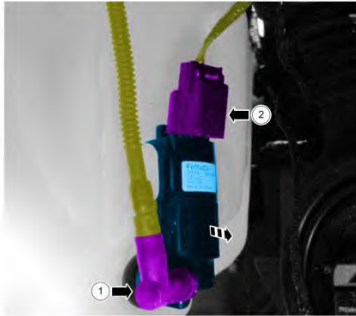

REMOVAL AND INSTALLATION > WINDSHIELD WASHER PUMP > INSTALLATION

 **NOTE:** Do not operate the washer pump prior to filling the windshield washer reservoir. Failure to follow this instruction may result in premature pump failure.

1.

To install, reverse the removal procedure.

Material

: Motorcraft ® Premium Windshield Wash Concentrate with Bitterant / ZC-32-B2 (WSS-M14P19-A)

REMOVAL AND INSTALLATION > WINDSHIELD WASHER RESERVOIR

Special Tool(s) / General Equipment

Fluid Suction Gun

Materials

Name	Specification
Motorcraft ® Premium Windshield Wash Concentrate with Bitterant ZC-32-B2	WSS-M14P19-A